



PS 7

NORTH AMERICAN CABIN, ENGINE & HOOD COMPONENTS



SUSPENSION



FIFTH WHEEL



BODY



AXLE



ANTI-VIBRATION



DRIVELINE



CABIN



STEERING



ENGINE & TRANSMISSION




EXHAUST





SR.#	BRANDS	PAGE
1	FORD	04-05
2	FREIGHTLINER	06-21
3	HINO	21-21
4	INTERNATIONAL NAVISTAR	21-30
5	KENWORTH	31-39
6	MACK	39-46
7	MERITOR	46-47
8	PETERBILT	47-50
9	VOLVO	50-54
10	WESTERN STAR	54-55
11	SHIFTER BOOTS	56-58


- **10 Brands**
- **293 References**
- **106 Red Dot Series Components**
- **85 Cabin Components**
- **141 Engine & Gear Components**
- **67 Hood Components**

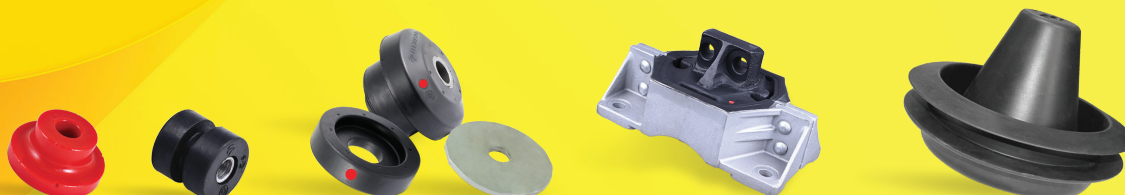

580.081

CABIN MOUNT


OEM #
4C4Z-7000155-DA
APPLICATION
FORD F650 SERIES
TRUCKS

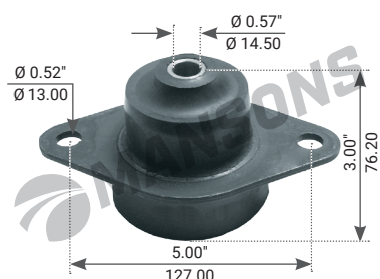

120.059

SHIFTER BOOT


OEM #
5C4Z-7E109-AA
5C4Z-7F110-AA
APPLICATION
FORD TRUCKS

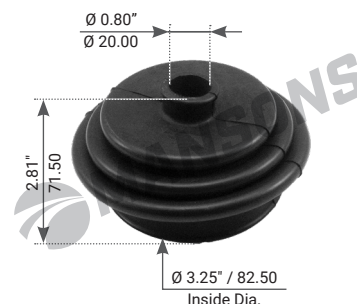

120.060

SHIFTER BOOT

OEM #
E3HZ-7277-B
E3HZ-7277-BB
APPLICATION
FORD F600, F700,
F800 SERIES HEAVY
DUTY TRUCKS

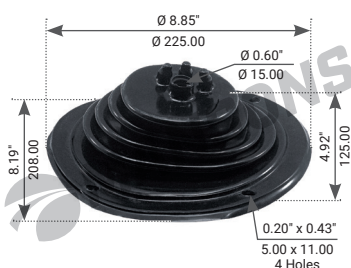

340.344

MOTOR MOUNT SET

OEM #
D0HZ-6068-BS
APPLICATION
FORD F600, F700,
F800, F900 SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
340.021	D0HZ-6068-B	1	2

580.292

MOTOR MOUNT SET

OEM #
4C40-6038-AAS
4C4Z-1000154-ABS
APPLICATION
FORD 2500, 2600,
8100 SERIES TRUCKS
DT-466, NGD ENGINE




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
480.002	4C40-6038-AA 4C4Z-1000154-BB 4C4Z6038A	1	1
580.213	4C4Z-1000154-AB 4C4Z6038C	2	1

340.021 MOTOR MOUNT

OEM #
D0HZ-6068-B

APPLICATION
FORD F600, F700,
F800, F900 SERIES
TRUCKS

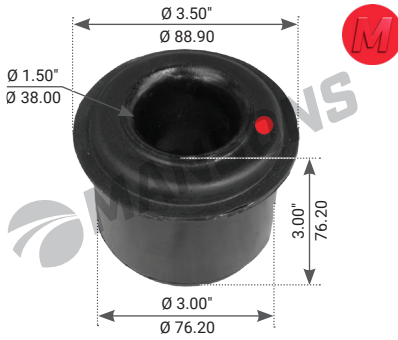


Dimensions: $\varnothing 3.50"$, $\varnothing 88.90$, $\varnothing 1.50"$, $\varnothing 38.00$, $3.00"$, 76.20 , $\varnothing 3.00"$, $\varnothing 76.20$

340.010 MOTOR MOUNT

OEM #
BCD-28317-2
F6H26068B
YC356068A

APPLICATION
FORD LOWER & REAR
ENGINE MOUNT -
1999 & LATER,
APPLICABLE ON
LEFT & RIGHT FORD
TRUCKS

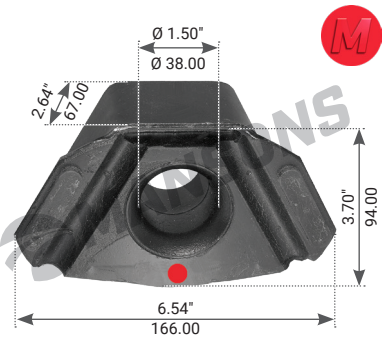


Dimensions: $\varnothing 1.50"$, $\varnothing 38.00$, $2.64"$, 67.00 , $3.70"$, 94.00 , $6.54"$, 166.00

340.119 MOTOR MOUNT

OEM #
D3HZ-6038-A

APPLICATION
FORD L8000 SERIES
TRUCKS

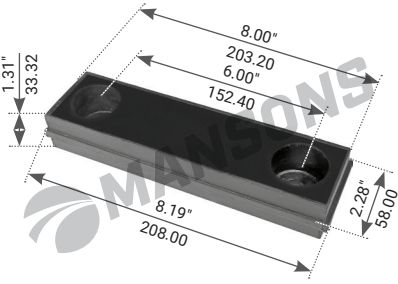


Dimensions: $8.00"$, 203.20 , $6.00"$, 152.40 , $1.31"$, 33.32 , $8.19"$, 208.00 , $2.28"$, 58.00

340.038 MOTOR MOUNT

OEM #
C8TZ-6A061-A

APPLICATION
FORD REAR F100,
F150, F250, F350
SERIES TRUCKS

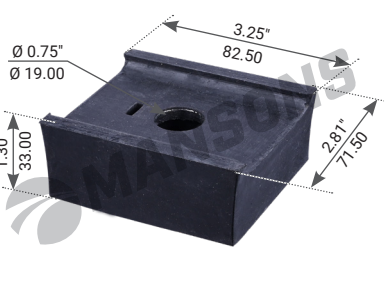


Dimensions: $\varnothing 0.75"$, $\varnothing 19.00$, $3.25"$, 82.50 , $1.30"$, 33.00 , $2.81"$, 71.50

580.213 MOTOR MOUNT

OEM #
4C4Z-1000154-AB
4C4Z6038C

APPLICATION
FORD 2500, 2600,
8100 SERIES TRUCKS
DT-466, NGD ENGINE

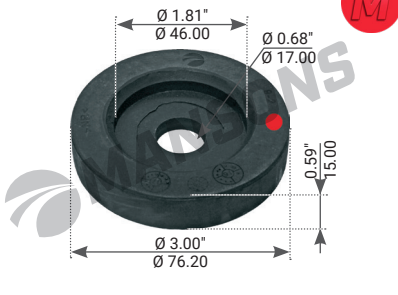


Dimensions: $\varnothing 1.81"$, $\varnothing 46.00$, $\varnothing 0.68"$, $\varnothing 17.00$, $0.59"$, 15.00 , $\varnothing 3.00"$, $\varnothing 76.20$

480.002 MOTOR MOUNT

OEM #
4C40-6038-AA
4C4Z1000154BB

APPLICATION
FORD 2500, 2600,
8100 SERIES TRUCKS
DT-466, NGD ENGINE

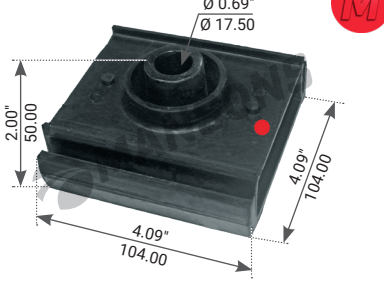

Dimensions: $\varnothing 0.69"$, $\varnothing 17.50$, $2.00"$, 50.00 , $4.09"$, 104.00 , $4.09"$, 104.00

580.254 INSULATOR KIT

OEM #

APPLICATION
FORD TRUCKS



580.316 INTERCOOLER MOUNTING KIT

OEM #

APPLICATION
FORD TRUCKS



360.392

CABIN MOUNT KIT

OEM #
18-41025-000
APPLICATION
FREIGHTLINER FLA,
ARGOSY SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.393	—	1	1
360.394	—	2	1

360.396

CABIN MOUNT KIT

OEM #
18-43636-000S
18-43637-000S
68-16910-001S
68-18900-001S
APPLICATION
FREIGHTLINER FLD
120 SERIES TRUCKS



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
360.046	18-43636-000 681-890-00-01 A6818900001	1	2
360.051	68-16910-001 A6818910001 SB3331007	2	2
MFI345000G810	23-09446-500 50764008	3	2
LNC105	23-13175-112	4	2
MUBW174	—	5	2

360.393

CABIN MOUNT

OEM #

APPLICATION
FREIGHTLINER FLA
SERIES TRUCKS

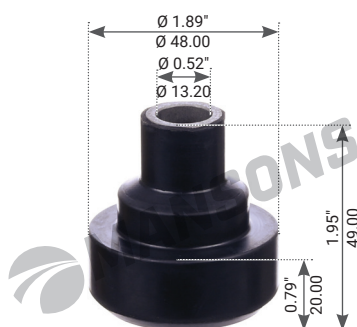


360.394

CABIN MOUNT

OEM #


APPLICATION
FREIGHTLINER FLA
SERIES TRUCKS

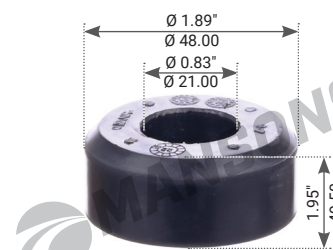

360.046

CABIN MOUNT


OEM #
18-43636-000
681-890-00-01
LORSB3310017A
LORSB3310017B
APPLICATION
FREIGHTLINER FLD
120 SERIES TRUCKS
LORD

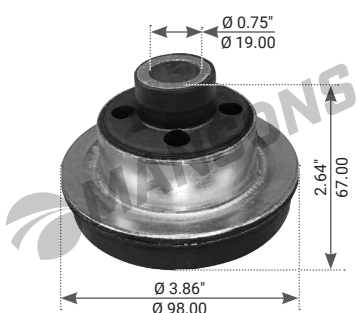

360.051

CABIN MOUNT

OEM #
68-16910-001
SB3331007
APPLICATION
FREIGHTLINER FLD
120 SERIES TRUCKS

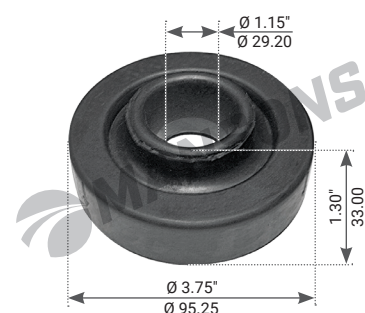

360.044

CABIN MOUNT BUSH

OEM #
18-35445-000
18-45959-000

APPLICATION
FREIGHTLINER
FRONT CABIN
ARGOSY SERIES
TRUCKS



360.319

CABIN MOUNT BUSH

OEM #
18-64205-000

APPLICATION
FREIGHTLINER
ARGOSY SERIES
TRUCKS




(Heavy duty version of 360.044)

360.321

CABIN MOUNT BUSH

OEM #
234761
62224
IPC234761

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

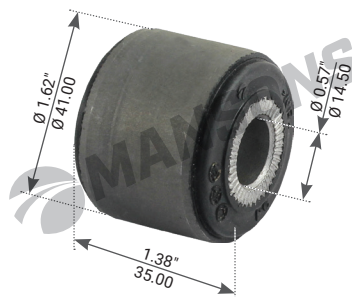


MPU360.296

CABIN MOUNT BUSH

OEM #
18-37924-000

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

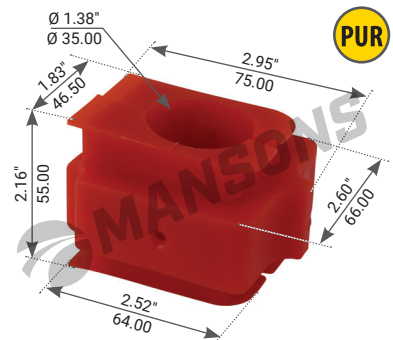


360.013

CABIN MOUNT

OEM #
18-45384-000
A18-40099-000

APPLICATION
FREIGHTLINER
CENTURY &
COLUMBIA SERIES
TRUCKS

Applicable Bush
360.354

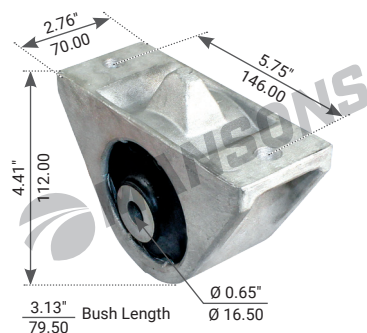


360.354

CABIN MOUNT BUSH

OEM #
BJ1769
BJ17699
LORDBJ17699
18-42727-000
18-34678-000

APPLICATION
FREIGHTLINER
CENTURY &
COLUMBIA SERIES
TRUCKS

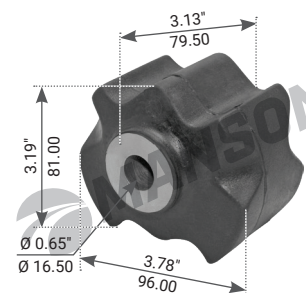

Applicable Mount 360.013


360.043

CABIN MOUNT

OEM #
18-34678-000
A18-34677-000

APPLICATION
FREIGHTLINER
CENTURY &
COLUMBIA SERIES
TRUCKS

Applicable Bush
360.355

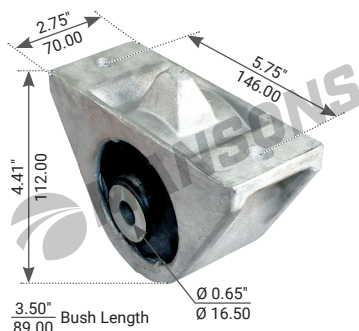


360.355

CABIN MOUNT BUSH

OEM #

APPLICATION
FREIGHTLINER
CENTURY &
COLUMBIA SERIES
TRUCKS

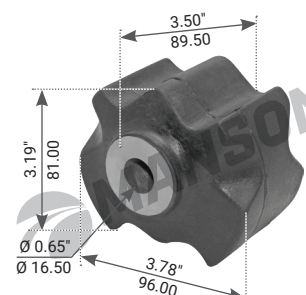


Applicable Mount 360.043

360.171

CABIN MOUNT

OEM #
18-45334-000
18-46742-000
18-47463-000
APPLICATION
FREIGHTLINER
BUSINESS CLASS M2
SERIES TRUCKS


Applicable Bush
360.356

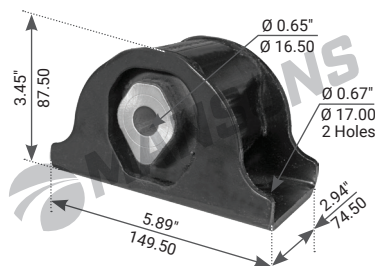

360.356

CABIN MOUNT BUSH

OEM #
APPLICATION
FREIGHTLINER
BUSINESS CLASS M2
SERIES TRUCKS

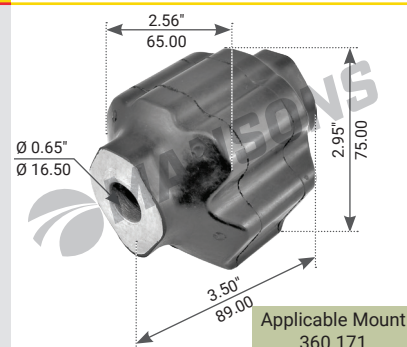


Applicable Mount
360.171

360.207

CABIN MOUNT

OEM #
18-59922-000
APPLICATION
FREIGHTLINER
CASCADIA, M2
SERIES TRUCKS


Applicable Bush
360.209

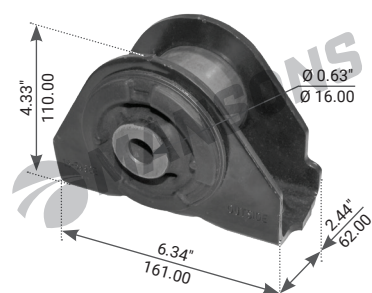

360.209

CABIN MOUNT BUSH

OEM #
FTL18-45959-000
APPLICATION
FREIGHTLINER
CASCADIA, M2
SERIES TRUCKS

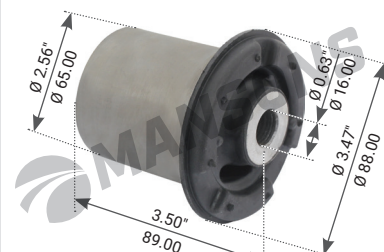


Applicable Mount 360.207

360.608

CABIN MOUNT

OEM #
J6210-46
LOR/J6210-46
APPLICATION
FREIGHTLINER
TRUCKS
LORD

NEW

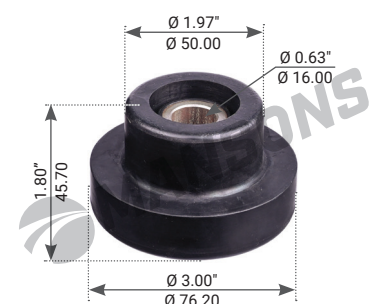


360.611

CABIN MOUNT

OEM #
J-3049-70
LOR/J3049-70
APPLICATION
FREIGHTLINER
CENTURY SERIES
TRUCKS
LORD

NEW

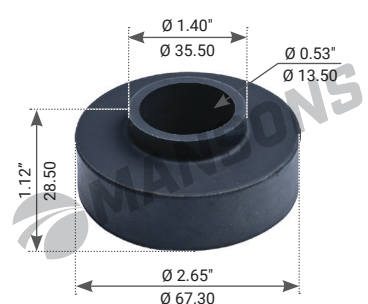

360.617

CABIN MOUNT

OEM #
CB-1124-2
LOR-CB-1124-2
APPLICATION
FREIGHTLINER
TRUCKS
LORD


NEW



360.019

SHIFTER BOOT

OEM #
07-11176-000
07-11584-000
APPLICATION
FREIGHTLINER EARLY
FLA, FLB SERIES
TRUCKS

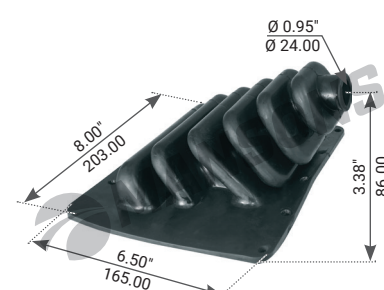

360.340

MOTOR MOUNT ASSEMBLY

OEM #
J2124660
J212475
LORJ2124660
LORJ212475
APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.553	01-33963-000 J2124637 J2124660 LORJ2124660	1	1
360.564	J212475 LOR/J21247-5 LORJ212475	2	1

860.027

MOTOR MOUNT ASSEMBLY

OEM #
HUN12004-3401S
HUN12004-3402S
APPLICATION
FREIGHTLINER
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
860.029	HUN12004-3401	1	2
860.028	HUN12004-3402	2	1

360.358

MOTOR MOUNT KIT

OEM #
A-680-240-00-18S2
A-680-241-02-18S2
APPLICATION
FREIGHTLINER FL70,
FLT, FLD SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.353	01-33243-000 A-680-240-00-18 J201201 J201204	1	1
360.326	A-680-241-02-18 J197911 J197913	2	1
WA462	A680-242-00-52	3	1

360.357

MOTOR MOUNT KIT

OEM #
A-680-240-00-18S1
A-680-241-02-18S1
APPLICATION
FREIGHTLINER FL70,
FLT, FLD SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.353	01-33243-000 A-680-240-00-18 A-680-240-01-18 J201201 J201204	1	1
360.326	A-680-241-02-18 J197911 J197913	2	1

360.142

MOTOR MOUNT KIT

OEM #

BCD-26907-1S
BCD-27330-1S
BCD-28805-1S

APPLICATION

FREIGHTLINER
COLUMBIA &
CENTURY CLASS
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.055	BCD-28805-1	1	1
360.022	BCD-26907-1 BCD-27330-1	2	1

360.397

MOTOR MOUNT KIT

OEM #

BCD269071S
BCD273301S
BCD288051S

APPLICATION

FREIGHTLINER
COLUMBIA &
CENTURY CLASS
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.055	BCD-28805-1	1	2
360.022	BCD-26907-1 BCD-27330-1	2	2
MFI344450G516	--	3	2
LNC105	23-13175-112	4	2
MUBW174	--	5	4

360.175

MOTOR MOUNT KIT

OEM #

BCD-26703-3S1
BCD-26704-1S1
BCD-27651-1S1
BCD-27651-2S1
BCD-27651-3S1
BCD-28945-1S1

APPLICATION

FREIGHTLINER
COLOMBIA &
CENTURY CLASS
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.173	BCD-26703-3 BCD-27651-1 BCD-27651-2 BCD-27651-3	1	1
360.174	BCD-26704-1 BCD-28945-1	2	1

360.360

MOTOR MOUNT KIT

OEM #

BCD-26703-3S
BCD-26704-1S
BCD-27651-1S
BCD-27651-2S
BCD-27651-3S
BCD-28945-1S

APPLICATION

FREIGHTLINER
COLOMBIA &
CENTURY CLASS
SERIES TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.173	BCD-26703-3 BCD-27651-1 BCD-27651-2 BCD-27651-3	1	1
360.174	BCD-26704-1 BCD-28945-1	2	1
620.109	--	3	2
MUBW174	--	4	4
LNC105	23-13175-112	5	2

860.028

MOTOR MOUNT


OEM #
HUN12004-3402
APPLICATION
FREIGHTLINER
TRUCKS

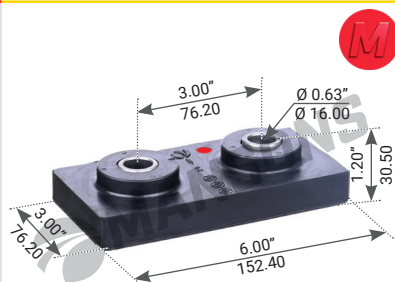

860.029

MOTOR MOUNT


OEM #
HUN12004-3401
APPLICATION
FREIGHTLINER
TRUCKS

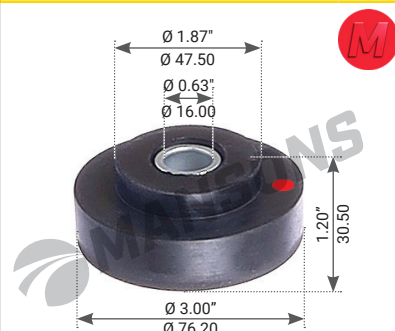

360.553

MOTOR MOUNT

OEM #
01-33963-000
J2124637
J2124660
APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS

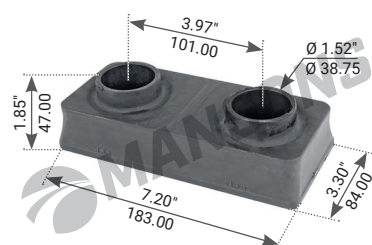


BOTTOM ID: Ø 0.78" / Ø 20.00

360.564

MOTOR MOUNT


OEM #
J212475
LOR/J21247-5
APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS
LORD

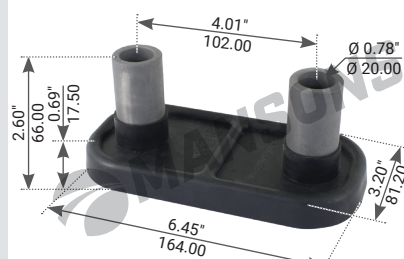

360.353

MOTOR MOUNT, UPPER


OEM #
01-33243-000
A-680-240-00-18
A-680-240-01-18
J201201
J201204
LORJ201201
LORJ201204
APPLICATION
FREIGHTLINER FL70,
FLT, FLD SERIES
TRUCKS
LORD

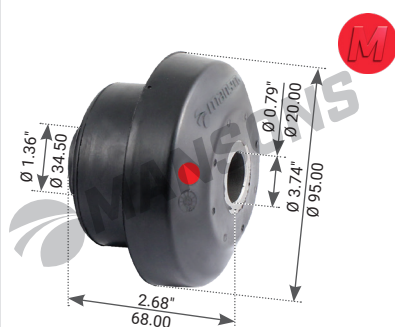

360.326

MOTOR MOUNT, LOWER


OEM #
A-680-241-02-18
J197911
J197913
LORJ197911
LORJ197913
APPLICATION
FREIGHTLINER FL70,
FLT, FLD SERIES
TRUCKS
LORD

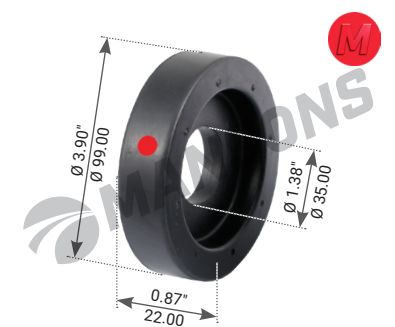

WA462

WASHER


OEM #
A680-242-00-52
APPLICATION
FREIGHTLINER FL70,
FLT UPPER SERIES
TRUCKS

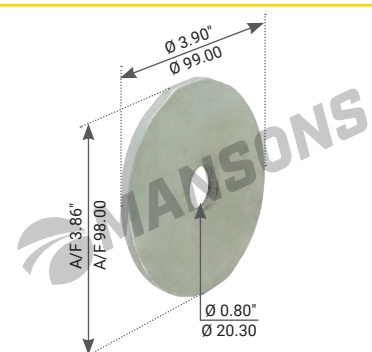

360.055

MOTOR MOUNT, LOWER

OEM #
BCD-28805-1
APPLICATION
FREIGHTLINER
COLUMBIA &
CENTURY CLASS
SERIES TRUCKS

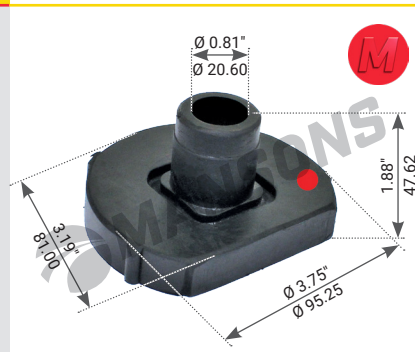


360.022

MOTOR MOUNT

OEM #
BCD-26907-1
BCD-27330-1

APPLICATION
FREIGHTLINER
COLUMBIA &
CENTURY CLASS
SERIES TRUCKS

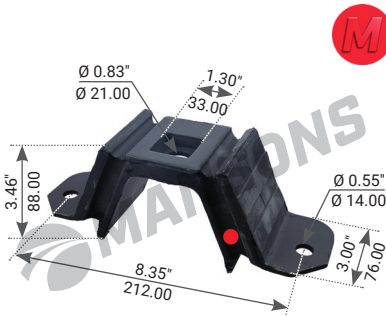


360.173

MOTOR MOUNT, UPPER

OEM #
BCD-26703-3
BCD-27651-1
BCD-27651-2
BCD-27651-3

APPLICATION
FREIGHTLINER
COLOMBIA &
CENTURY CLASS
SERIES TRUCKS

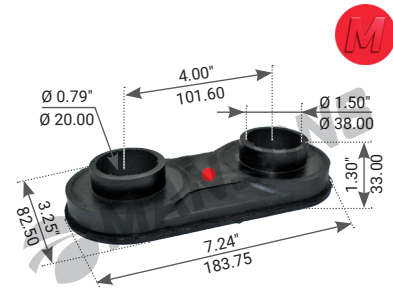


360.174

MOTOR MOUNT, LOWER

OEM #
BCD-26704-1
BCD-28945-1

APPLICATION
FREIGHTLINER
COLOMBIA &
CENTURY CLASS
SERIES TRUCKS

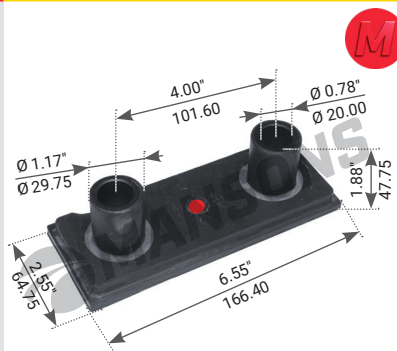

360.045


MOTOR MOUNT

OEM #
J-20941-3, J-20941-36
J209414, J209415
J2094167, J209417

LOR J-20941-36
LORJ2094416

APPLICATION
FREIGHTLINER
FLD 112, FLD 120,
CONVENTIONAL XL,
FLD132, CLASSIC
SL, XL, COLUMBIA
& CENTURY CLASS
SERIES TRUCKS

LORD

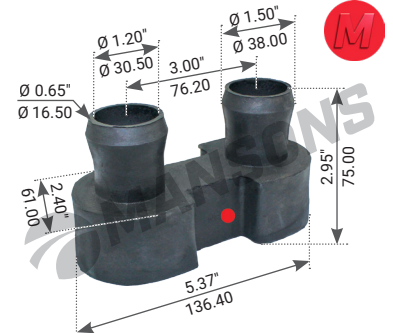


360.053

MOTOR MOUNT

OEM #
BCD-27477-2

APPLICATION
FREIGHTLINER
COLUMBIA &
CENTURY CLASS
SERIES TRUCKS

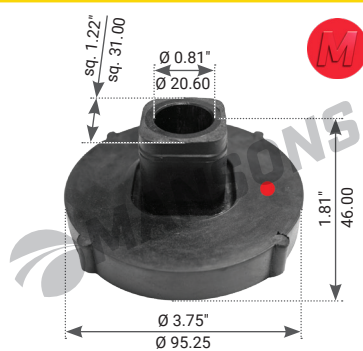

360.103

MOTOR MOUNT

OEM #
SSB3310018
01-15047-000

LORSSB3310018

APPLICATION
FREIGHTLINER
FLD120, FLT,
CENTURY, COLUMBIA
& M2 CLASS SERIES
TRUCKS

LORD



360.387

MOTOR MOUNT

OEM #
LOR-J-6256-64
LOR J20941-6

APPLICATION
FREIGHTLINER
TRUCKS

LORD



360.327

MOTOR MOUNT

OEM #
23-09726-004
CB11251
CB11252
CB11252A
M700-50NR

APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS

NEW



360.606


MOTOR MOUNT

OEM #
CBA24650
CBA24-650-17
LOR/CBA24-650
LOR/CBA24-650-17

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

LORD

NEW

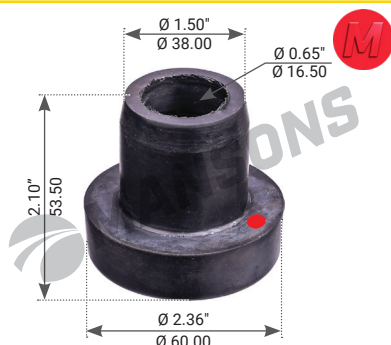

360.607

MOTOR MOUNT

OEM #
CB1121-2
CB-1121-2

LOR/CB1121-2

APPLICATION
FREIGHTLINER
TRUCKS

LORD

NEW



360.610


MOTOR MOUNT

OEM #
CB11222
LOR/CB-1122-2

APPLICATION
FREIGHTLINER
TRUCKS

LORD

NEW

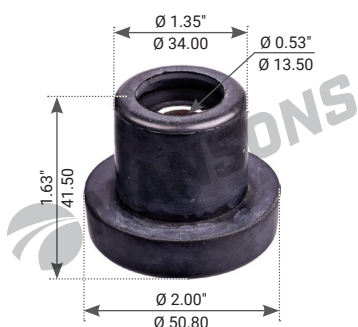


360.042

MOTOR MOUNT

OEM #
CBA/24650-17

APPLICATION
FREIGHTLINER
FLD120 SERIES
TRUCKS

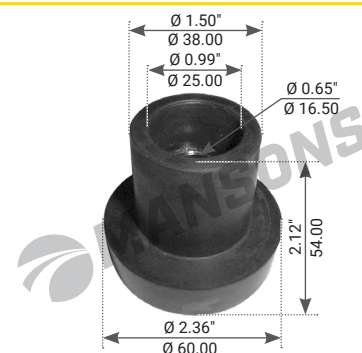

360.596

MOTOR MOUNT

OEM #
CB2203-72
LOR/CB2203-72

APPLICATION
FREIGHTLINER
TRUCKS

LORD

NEW



360.589


MOTOR MOUNT

OEM #
J-20595-1
LOR/J20595-1

APPLICATION
FREIGHTLINER
TRUCKS

LORD

NEW

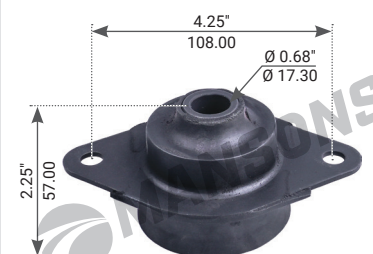


360.047

RADIATOR MOUNT

OEM #
BCD-28721-1
BCD-28847-1

APPLICATION
FREIGHTLINER FL70,
FL80, COLUMBIA
CLASS SERIES
TRUCKS

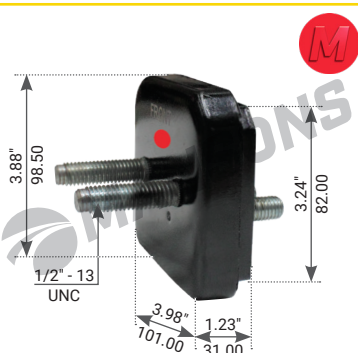


360.213

RADIATOR MOUNT

OEM #
680-504-01-82
680-504-03-82
LORSM10356
LORSM10359

APPLICATION
FREIGHTLINER FC70,
FC80, FLB, M2 106
SERIES TRUCKS

LORD

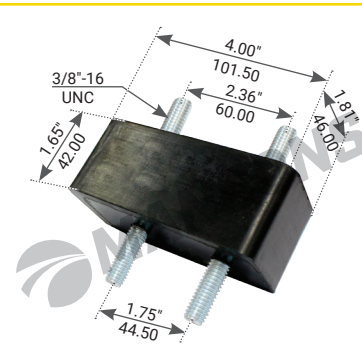

360.441

RADIATOR MOUNT

OEM #
05-160700-00
APPLICATION
FREIGHTLINER
FLD120, CENTURY
CLASS SERIES
TRUCKS



360.613

RADIATOR MOUNT

OEM #
CB1122-4
J-6256-3
LOR/CB1122-4
LORJ62563
APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS
LORD


NEW



540.063

RADIATOR MOUNT

OEM #
120043401
J71651
APPLICATION
FREIGHTLINER
TRUCKS

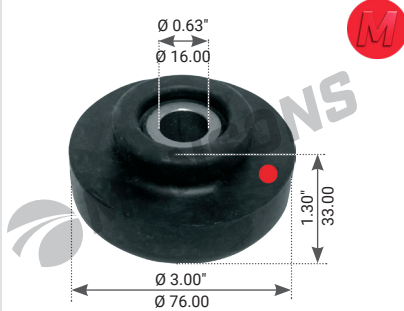

360.615

ISOLATOR

OEM #
CB-2202-73
APPLICATION
FREIGHTLINER
CENTURY &
COLUMBIA CLASS
SERIES TRUCKS

NEW



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.615.1	--	1	1
360.615.2	--	2	1

360.616

ISOLATOR

OEM #
CB-2202-4
APPLICATION
FREIGHTLINER
TRUCKS

NEW



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
360.616.1	--	1	1
360.616.2	--	2	1

360.597	ISOLATOR ASSEMBLY
<p>OEM # J-196941 J19694-1 LOR/J19694-1</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	

360.603	ISOLATOR
<p>OEM # CB-2201-2 LOR/CB-2201-2</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	

360.614	ISOLATOR
<p>OEM # CB2201-12 LOR/CB2201-12</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	

360.595	ISOLATOR
<p>OEM # J-11729-177 J11729-177 LOR/J-11729-177</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	

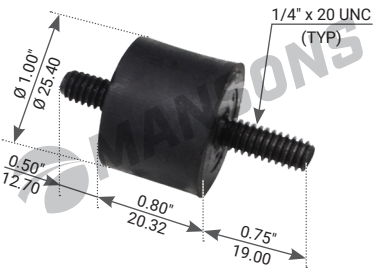360.541	ISOLATOR
<p>OEM # 17-12127-000</p> <p>APPLICATION FREIGHTLINER FLD SERIES TRUCKS</p>	

360.600	ISOLATOR
<p>OEM # J-11729-123 LOR/J-11729-123</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	


360.601	ISOLATOR
<p>OEM # CB1121-10 LOR/CB1121-10</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p> <p>NEW</p>	

360.604	ISOLATOR
<p>OEM # CBC-35-2-9 LOR/CBC-35-2-9</p> <p>APPLICATION FREIGHTLINER TRUCKS LORD</p>	

360.605

ISOLATOR

OEM #
CB1124-5
LOR/CB1124-5
APPLICATION
FREIGHTLINER
TRUCKS
LORD

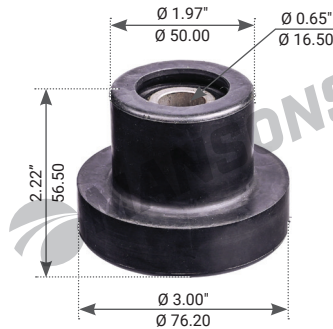

360.609

ISOLATOR

OEM #
CBA20-300
LOR/CBA20300
APPLICATION
FREIGHTLINER
TRUCKS
LORD



360.612

ISOLATOR


OEM #
CBA12-100
LOR/CBA-12-100
APPLICATION
FREIGHTLINER
TRUCKS
LORD



360.505

INSULATOR


OEM #
SSB26-1000-1
LOR/SSB26-1000-1
APPLICATION
FREIGHTLINER
TRUCKS
LORD

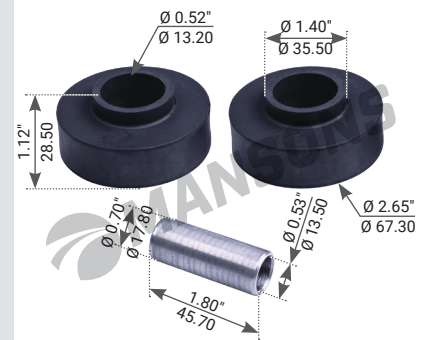

360.176

ISOLATOR


OEM #
DDE23522281
APPLICATION
FREIGHTLINER
TRUCKS

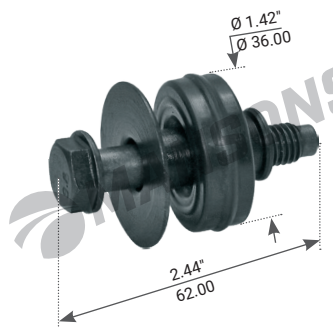

360.180

ISOLATOR


OEM #
DDE23530961
APPLICATION
FREIGHTLINER
TRUCKS

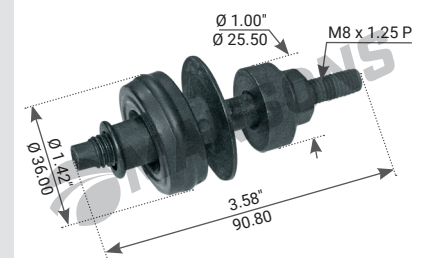

360.181

ISOLATOR


OEM #
DDE23522271
APPLICATION
FREIGHTLINER
TRUCKS

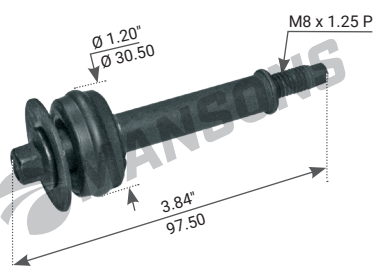

360.130

HOOD LATCH

OEM #
17-13815-000
17-13815-002
17-14121-000
A17-13810-000
A17-13810-004
A17-15553-000
APPLICATION
FREIGHTLINER
COLUMBIA SERIES
TRUCKS

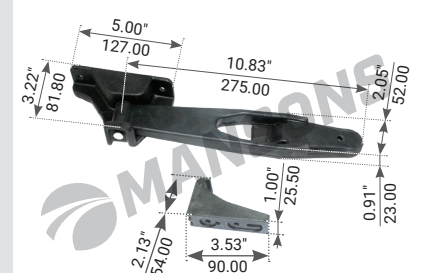


360.131

HOOD LATCH

OEM #
17-13815-001
17-13815-003
17-14121-001
A17-13810-001
A17-13810-005
A17-15553-001

APPLICATION
FREIGHTLINER
COLUMBIA SERIES
TRUCKS

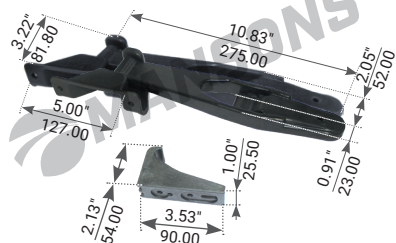


360.132

HOOD LATCH

OEM #
17-12018-000
17-12434-000
17-12435-000
37-99-210-50

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

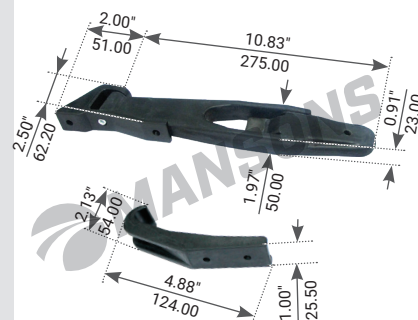


360.133

HOOD LATCH

OEM #
17-12434-001
17-12435-001
37-99-211-50

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

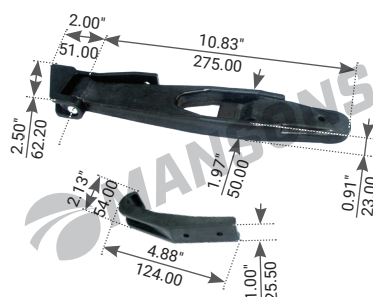


360.147

HOOD LATCH

OEM #
17-12348-000

APPLICATION
FREIGHTLINER FLD
120, CLASSIC XL
SERIES TRUCKS

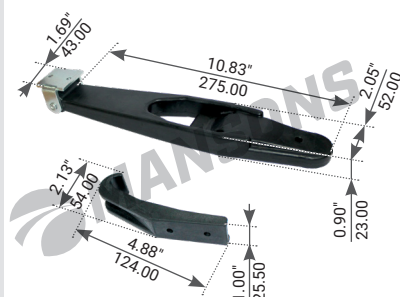


360.182

HOOD LATCH

OEM #
68-088001-60
680-880-01-60

APPLICATION
FREIGHTLINER FL80,
STERLING, M2 SERIES
TRUCKS

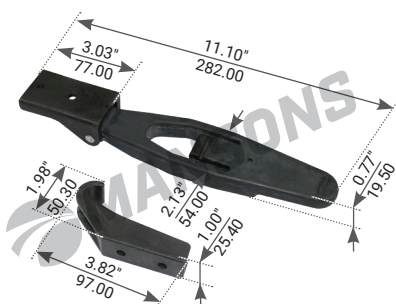

360.135

HOOK, HOOD LATCH

OEM #
17-13788-000
A17-13788-000

APPLICATION
FREIGHTLINER
COLUMBIA SERIES
TRUCKS




360.136

HOOK, HOOD LATCH

OEM #
17-12434-000

APPLICATION
FREIGHTLINER
CLASSIC XL, FLD
SERIES TRUCKS

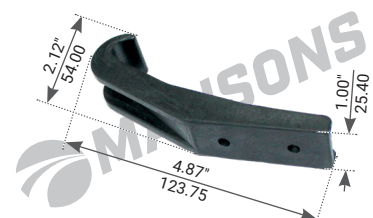


360.182.3

HOOK, HOOD LATCH

OEM #
103952
17-14781-000
68-08871-514
A68-08871-514

APPLICATION
FREIGHTLINER FL60,
FL70, FL80 SERIES
TRUCKS

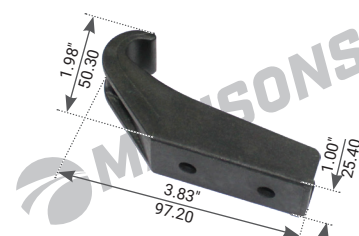

360.211


HOOD LATCH

OEM

A17-12759-000
A17-12966-000
A17-13113-000
A17-13534-000

APPLICATION

FREIGHTLINER
CENTURY CLASS
SERIES TRUCKS, LH

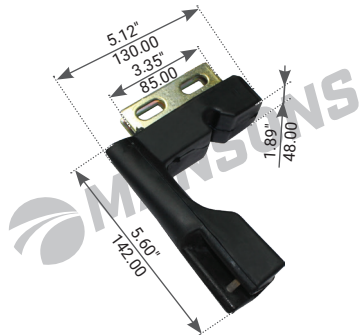

360.212

HOOD LATCH

OEM

A17-12759-001
A17-12966-001
A17-13113-001
A17-13534-001

APPLICATION

FREIGHTLINER
CENTURY CLASS
SERIES TRUCKS, RH



360.310

HOOD LATCH

OEM

17-12886-000
A17-12658-000
A17-12658-002

APPLICATION

FREIGHTLINER
CENTURY SERIES
TRUCKS, LH



360.311

HOOD LATCH

OEM

17-12886-001
A17-12658-001
A17-12658-003

APPLICATION

FREIGHTLINER
CENTURY SERIES
TRUCKS, RH



360.312


HOOD LATCH

OEM

17-12711-000
A17-15370-002
A17-15370-000
A17-15370-004

APPLICATION

FREIGHTLINER
CASCADIA SERIES
TRUCKS, LH

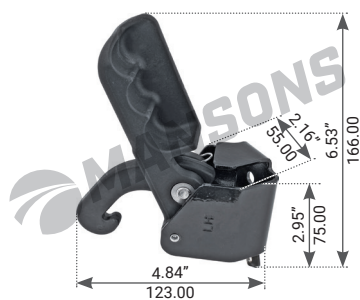

360.313


HOOD LATCH

OEM

17-12711-001
A17-15370-001
A17-15370-003
A17-15370-005
A17-16127-000

APPLICATION

FREIGHTLINER
CASCADIA SERIES
TRUCKS, RH

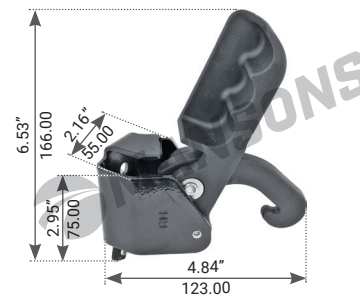

360.534


HOOD LATCH

OEM

A17-15729-000
A17-15729-002
A17-15729-004

APPLICATION

FREIGHTLINER
CASCADIA SERIES
TRUCKS

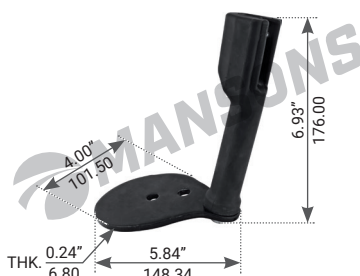

360.562

HOOD LATCH

OEM

A17-15729-001
A17-15729-003
A17-15729-005

APPLICATION

FREIGHTLINER
CASCADIA SERIES
TRUCKS



360.533

HOOD SUPPORT LATCH

OEM #

APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS

NEW




360.314

HOOD LATCH MOUNT

OEM #

A17-13666-000

APPLICATION
FREIGHTLINER
COLUMBIA SERIES
TRUCKS

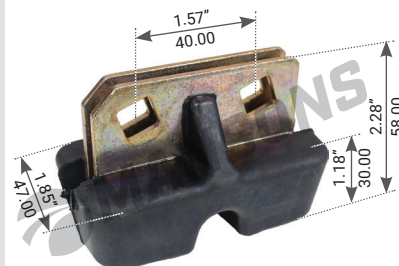


360.054

HOOD HINGE BUSH

OEM #

LORJ-1770-01
LORJ-1770-02
LORJ-1770-05

APPLICATION
FREIGHTLINER
FLC, FLD, CENTURY,
COLUMBIA SERIES
TRUCKS

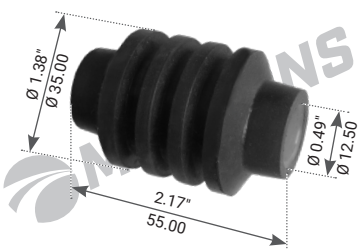


360.172

HOOD HINGE BUSH

OEM #

17-12736-000

APPLICATION
FREIGHTLINER
COLUMBIA, CENTURY
CLASS SERIES
TRUCKS

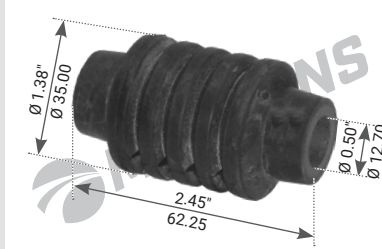

360.594

HOOD HINGE BUSH

OEM #

A17-13975-000

APPLICATION
FREIGHTLINER
TRUCKS

NEW




360.102

HOOD CONE

OEM #

A17-10464-001

APPLICATION
FREIGHTLINER FLD
SERIES TRUCKS

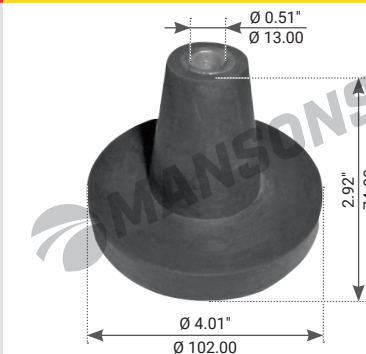

360.602


HOOD BUMPER

OEM #

17-13877-000

APPLICATION
FREIGHTLINER
STERLING ACTERRA
SERIES TRUCKS

NEW

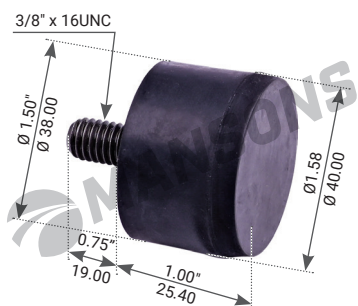

MPU360.557

HOOD BUMPER

OEM #

A17-20868-000
A18-59704-000

APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS


PUR



360.408

HOOD BELLOW

OEM #
03-23552-000
APPLICATION
FREIGHTLINER
COLUMBIA, CENTURY
SERIES TRUCKS

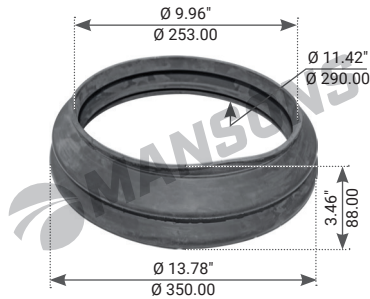

360.409

HOOD BELLOW

OEM #
03-31852-000
APPLICATION
FREIGHTLINER
COLUMBIA, CENTURY
112 SERIES TRUCKS



360.552

FUEL TANK BRACKET


OEM #
03-32976-750
APPLICATION
FREIGHTLINER M2
SERIES TRUCKS



190.024

ENGINE MOUNT


OEM #
12035-1660
APPLICATION
HINO F18, FL3H,
MELPHA, RAINBOW,
RANGER, SELEGA
SERIES TRUCKS

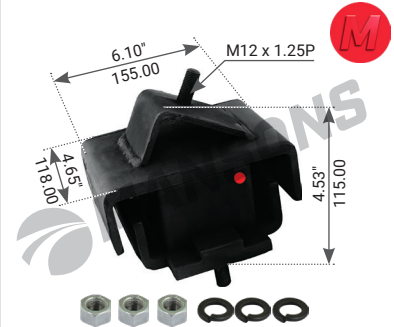

580.210

CABIN MOUNT BUSH


OEM #
3574678C1
3574680C1
864680
APPLICATION
INTERNATIONAL
NAVISTAR 4100,
4200, 4300, 4400,
7300, 7400, 7500,
7600, CXT, MXT, RXT
SERIES TRUCKS

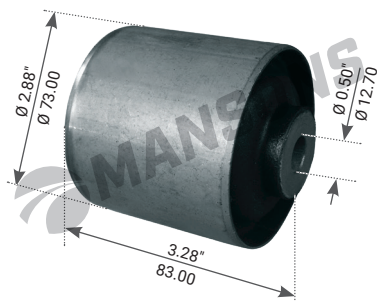

580.235

CABIN MOUNT BUSH

OEM #
3595980C1
3595980C2
3595980C3
3595980C4
APPLICATION
INTERNATIONAL
NAVISTAR 5900,
7300, 7400, 7500,
7600, 8600, 9900,
LONESTAR, PROSTAR
CONVENTIONAL
SLEEPER SERIES
TRUCKS

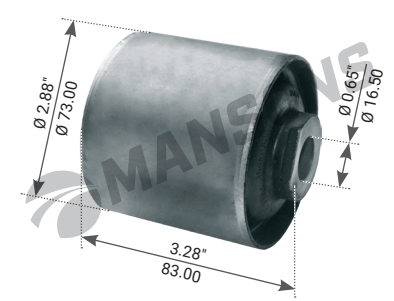

580.041

CABIN MOUNT BUSH


OEM #
503359C1
APPLICATION
INTERNATIONAL
NAVISTAR 9370, 9670
SERIES TRUCKS



580.049

CABIN MOUNT

OEM #
3515345C1
3515345C2
APPLICATION
INTERNATIONAL
NAVISTAR EAGLE
5000, 5500, 5600,
5900, 9100, 9200,
9400, 9900 SERIES
TRUCKS

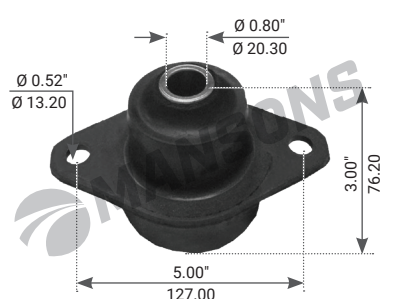




580.080

CABIN MOUNT

OEM #
3512064C4

APPLICATION
INTERNATIONAL
NAVISTAR EAGLE
4200, 4300, 4400,
7300, 7400, 7500,
8300 SERIES TRUCKS

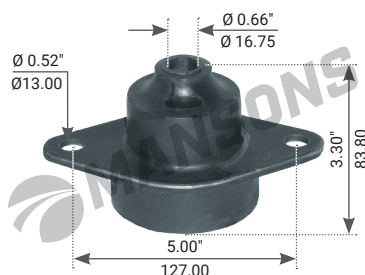


580.081

CABIN MOUNT

OEM #
1656874C2

APPLICATION
INTERNATIONAL
NAVISTAR FOR CODE
16030 & 16196 1994
2nd LATER, 1400,
1600, 1652, 2500,
2600, 3000, 3400,
3800, 3900, 4500 TO
4900, 7100, 8100 TO
8300, 9200 TRUCKS

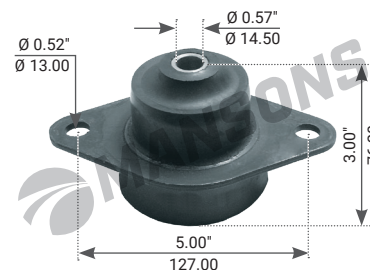

580.079

CABIN MOUNT

OEM #
753997C91
753997C92
753997C93

APPLICATION
INTERNATIONAL
NAVISTAR 4000 &
5000 SERIES TRUCKS




580.204

CABIN MOUNT

OEM #
3512104C2
475941C2

APPLICATION
INTERNATIONAL
NAVISTAR REAR
3200, 4100, 4200,
4300, 4400, 7100,
7300, TERRASTAR
SERIES TRUCKS

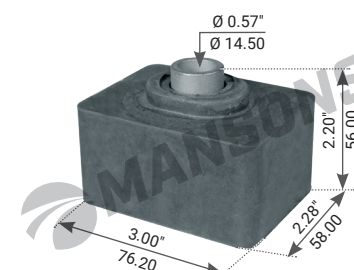


580.205

CABIN MOUNT

OEM #
505969C1
590981C1

APPLICATION
INTERNATIONAL
NAVISTAR 16030
& 16196 PRIOR TO
1994, 1400, 1600,
1652, 1700 TO 1900,
2100, 4500 TO 4900,
7100 SERIES TRUCKS

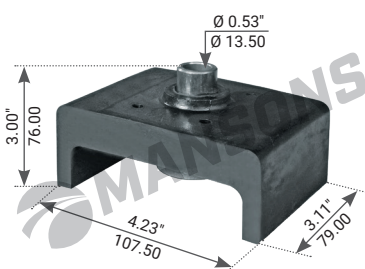


580.206

CABIN MOUNT

OEM #
14003022
449713C1
449713C2

APPLICATION
INTERNATIONAL
NAVISTAR 2100 TO
2600, 4500 TO 4900,
7100, 8100, 8200,
8300, 9200, 9300,
9400 SERIES TRUCKS

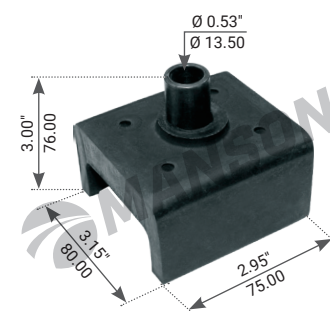


580.208

CABIN MOUNT

OEM #
498396C1

APPLICATION
INTERNATIONAL
NAVISTAR 1300 TO
1900, 2100, 2500, 2600,
3000 TO 3900, 4500 TO
4900, 7100, 8100 TO
8300 SERIES TRUCKS
& BE200, CE200/300
FBC SERIES BUS

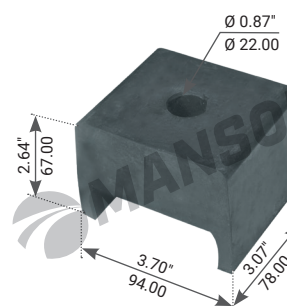


580.209

CABIN MOUNT

OEM #
473935C1

APPLICATION
INTERNATIONAL
NAVISTAR REAR
4000 SERIES CABIN
MOUNT CODE 16
CAC16030 & 16196
EXc 4600 UH & FOR
7100 SERIES MODEL
TRUCKS

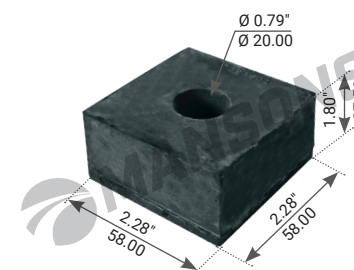

580.207

CABIN MOUNT

OEM

14003023
473987C1
473987C2
473987C3

APPLICATION

INTERNATIONAL
NAVISTAR 16030
& 16196 PRIOR TO
1994, 1400, 1600,
1652, 1700 TO 1900,
2100, 4500 TO 4900,
7100 SERIES TRUCKS



580.251


CABIN BRACKET

OEM

2503594C1

APPLICATION

INTERNATIONAL
NAVISTAR 9670,
9700, 9800, 9800i
SERIES TRUCKS

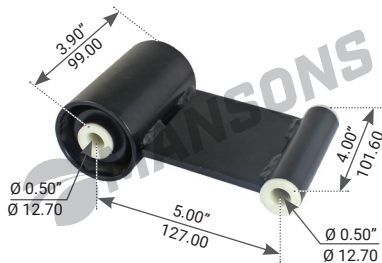

580.250


BOLT

OEM

2503593C1

APPLICATION

INTERNATIONAL
NAVISTAR 9670,
9700, 9800, 9800i
SERIES TRUCKS

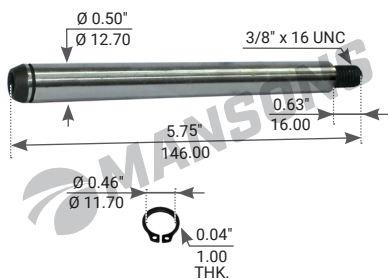

580.021


SHIFTER BOOT

OEM

2014834
26011202
286655C1
286655C2
286655C3
286655C4

APPLICATION

INTERNATIONAL
NAVISTAR 'S', 4000
SERIES TRUCKS

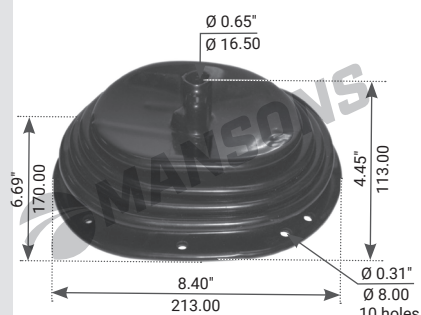

580.317

SWIVEL ARM ASSEMBLY

OEM

2503593C1S
2503594C1S

APPLICATION

INTERNATIONAL
NAVISTAR 9670,
9700, 9800, 9800i
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.251	2503594C1	1	1
580.250	2503593C1	2	2

900.562


STUB LEVER HOUSING ASSEMBLY

OEM

140928R1
FULS2130

APPLICATION

INTERNATIONAL
NAVISTAR TRUCKS

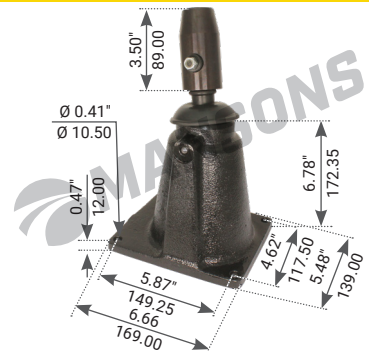

580.022


SHIFTER BOOT

OEM

2014835
291068C1
291068C2

APPLICATION

INTERNATIONAL
NAVISTAR 'S', 4900
SERIES TRUCKS

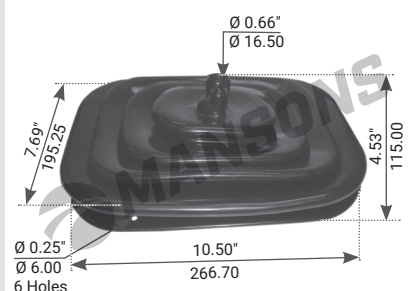


580.023

SHIFTER BOOT

OEM #
778671C1

APPLICATION
INTERNATIONAL/ IHC
TRUCKS

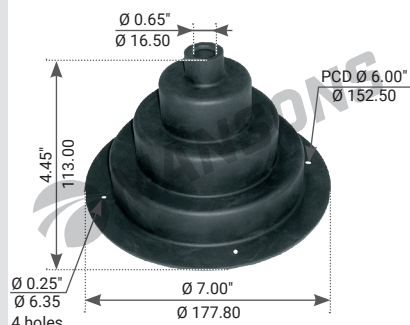


580.267

SHIFTER BOOT

OEM #
1677878C1
507014C3

APPLICATION
INTERNATIONAL
NAVISTAR 5870,
9600, 9700, 9800,
9900 COE SERIES
TRUCKS

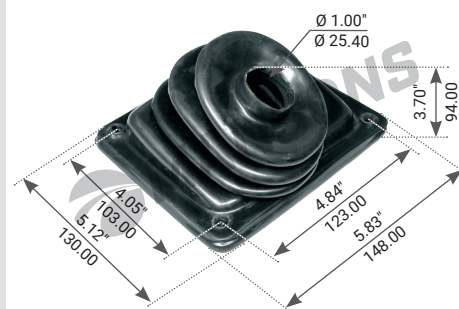


120.059

SHIFTER BOOT

OEM #
1677150C2,
1680583C1

APPLICATION
INTERNATIONAL
NAVISTAR TRUCKS

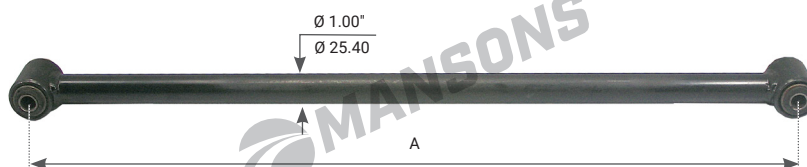

MANSONS #	OEM#	LENGTH A	BUSH -1	BUSH-2
360.066	2503652C1	8.00"/ 203.20	580.042	580.042
360.067	2507760C1, 29932012	9.75"/ 247.65	580.042	580.042
360.068	2500448C2, 2507405C1, 2586470C1	12.00"/ 304.80	580.042	580.042
360.069	2503652C1	14.00"/ 355.60	580.042	580.042

580.269

LINKAGE KIT

OEM #
2586504C1S

APPLICATION
INTERNATIONAL
NAVISTAR 9670,
9700, 9800 SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.268	2586504C1	1	1 Kit
580.457	2501304C1	2	1

580.435

MOTOR MOUNT BRACKET ASSEMBLY

OEM #
503580C1
503837C1
507569C91

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.244	8075202S 8077380S	1	1
580.271	—	2	1

580.462

MOTOR MOUNT BRACKET ASSEMBLY

OEM #
503579C1S
503580C1S

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
340.021	503579C1	1	1
580.271	503580C1	2	1

580.508

MOTOR MOUNT KIT

OEM #
1664724C1S
1664724C2S
1664724C3S

APPLICATION
INTERNATIONAL
NAVISTAR 9200,
9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS

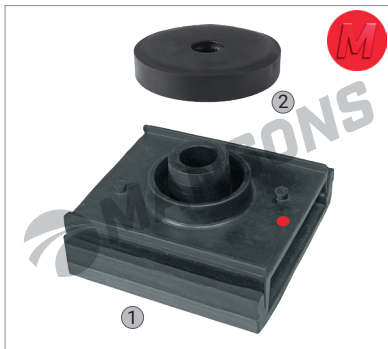

Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
480.001	1664724C1 1664724C2 1664724C3	1	1
580.213	1664726C1 1664726C2 1664726C3	2	1

580.292

MOTOR MOUNT KIT

OEM #
1664723C2S
1664723C3S
1664723C4S
1664726C1S
1664726C2S
1664726C3S

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100,
9200, 9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
480.002	1664723C2 1664723C3 1664723C4	1	1
580.213	1664726C1 1664726C2 1664726C3	2	1

580.463

MOTOR MOUNT KIT

OEM

1664726C1S
1664726C2S
1664728C1S
1664728C2S

APPLICATION

INTERNATIONAL
NAVISTAR 9200,
9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.169	1664728C1 1664728C2	1	1
580.213	1664726C1 1664726C2 1664726C3	2	1

580.293

MOTOR MOUNT KIT

OEM

1664730C4S
1664730C5S
1664730C7S
16647929C1S
16647929C2S
16647929C3S
16647929C4S

APPLICATION

INTERNATIONAL
NAVISTAR PAYSTAR
530, 5000 SERIES
TRUCKS, N14 ENGINE



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.020	1664729C1 1664729C2 1664729C3 1664729C5 1664729C7 3613279C2 3613279C4	1	1
580.212	1664730C4 1664730C5 1664730C7 2014777C2	2	1

580.454

MOTOR MOUNT KIT

OEM

1664726C1S1
1664726C2S1
1664726C3S1
1664728C1S1
1664728C2S1

APPLICATION

INTERNATIONAL
NAVISTAR 9200,
9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
360.169	1664728C1, 1664728C2	1	1
580.213	1664726C1, 1664726C2 1664726C3	2	1
120.550	-	3	1

580.453

MOTOR MOUNT KIT

OEM

1664729C1S1
1664729C2S1
1664729C3S1
1664729C5S1
1664729C7S1
1664730C4S1
1664730C5S1
1664730C7S1
16647929C4S1
2014777C2S1
3613279C2S1

APPLICATION

INTERNATIONAL
NAVISTAR PAYSTAR
530, 5000 SERIES
TRUCKS, N14 ENGINE



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.020	1664729C1, 1664729C2 1664729C3, 1664729C5 1664729C7, 3613279C2 3613279C4	1	1
580.212	1664730C4, 1664730C5 1664730C7, 2014777C2	2	1
MFIF3445004810	-	3	1
FLNC105	-	4	1
MUBW174	-	5	2

340.344

MOTOR MOUNT SET

OEM #
503579C1

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
340.021	503579C1	1	2

340.021

MOTOR MOUNT

OEM #
503579C1

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS

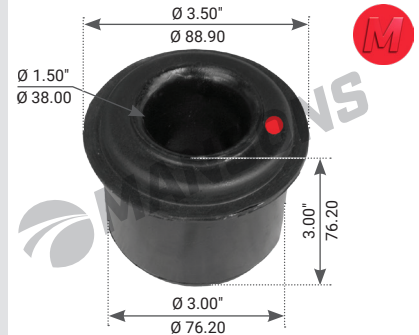


900.350

MOTOR MOUNT

OEM #
503579C1

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS

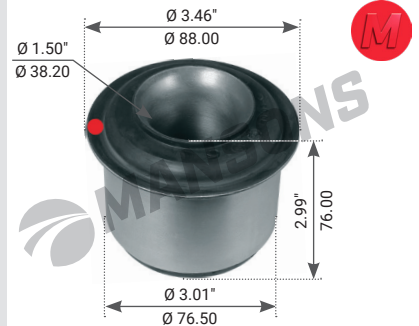


580.271

BRACKET

OEM #
503580C1

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS

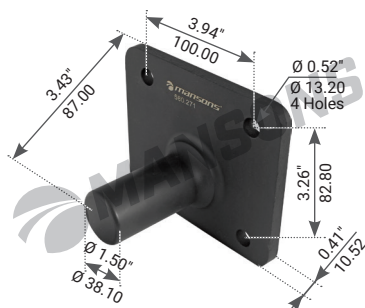


580.244

MOTOR MOUNT

OEM #
14003070
503837C1
507569C91

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 8200,
8300, 9100 TO 9900
SERIES TRUCKS

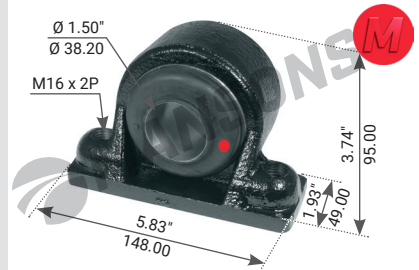


Applicable Bush 340.021

480.001

MOTOR MOUNT

OEM #
1664724C1
1664724C2
1664724C3

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 3400 TO 3900,
5500, 5600i, 5900,
8100 TO 8300,
9100 TO 9900,
LONESTAR, PROSTAR
CONVENTIONAL
SERIES TRUCKS

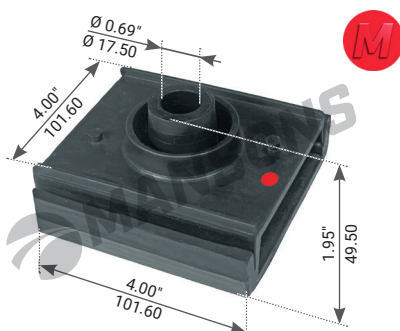


480.002

MOTOR MOUNT

OEM #
1664723C2
1664723C3
1664724C3

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 8100, 9200
SERIES TRUCKS

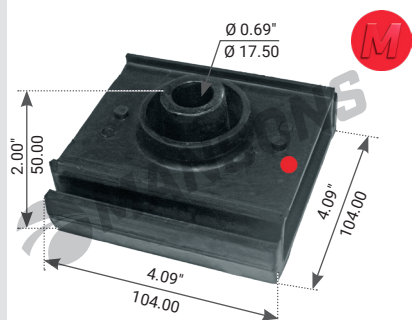


580.212

MOTOR MOUNT

OEM #
1664730C4
1664730C5
1664730C7
2014777C2

APPLICATION
INTERNATIONAL
NAVISTAR PAYSTAR
530, 5000 SERIES
TRUCKS, N14 ENGINE

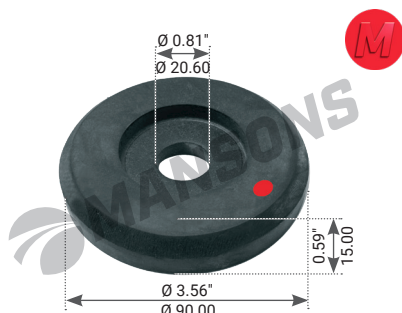


580.213

MOTOR MOUNT

OEM #
1664726C1
1664726C2
1664726C3

APPLICATION
INTERNATIONAL
NAVISTAR 9200,
9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS

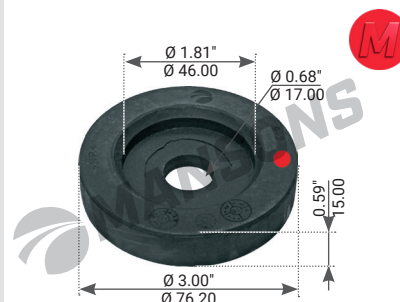


360.169

MOTOR MOUNT

OEM #
1664728C1
1664728C2

APPLICATION
INTERNATIONAL
NAVISTAR 9200,
9400, 9900,
LONESTAR, PAYSTAR,
TRANSTAR,
WORKSTAR SERIES
TRUCKS

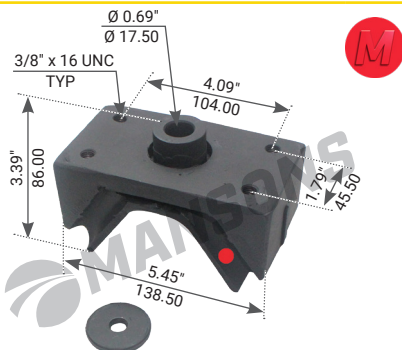


580.020

MOTOR MOUNT

OEM #
1664729C1
1664729C2
1664729C3
1664729C5
1664729C7
3613279C2
3613279C4

APPLICATION
INTERNATIONAL
NAVISTAR PAYSTAR
530, 5000 SERIES
TRUCKS, N14 ENGINE

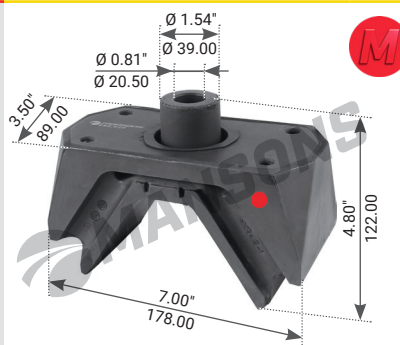


580.051

MOTOR MOUNT

OEM #
503401C1
503401C2

APPLICATION
INTERNATIONAL
NAVISTAR 2500,
2600, 3000,
4900, 5000, 5500,
5600, 5900, 8100,
9100, 9200, 9400,
9800, 9900 SERIES
TRUCKS

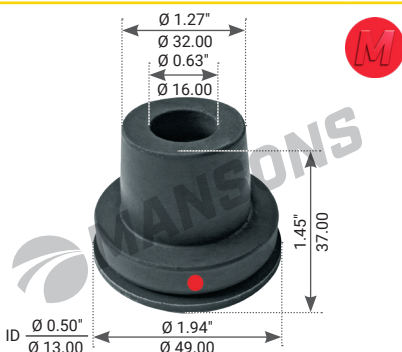


580.076

MOTOR MOUNT

OEM #
14003053
470031C1
470031C2

APPLICATION
INTERNATIONAL
NAVISTAR 9000,
1600, 2200, 4000
MEDIUM DUTY
SERIES TRUCKS

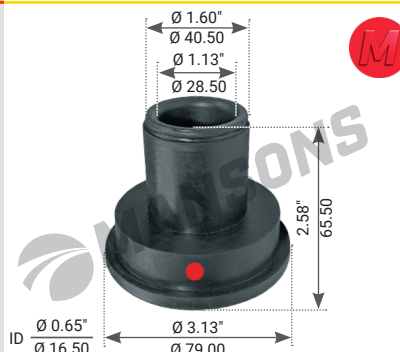


580.077

MOTOR MOUNT

OEM #
14003030
14003052
479237C1
583955C1

APPLICATION
INTERNATIONAL
NAVISTAR 5000, 9000
SERIES TRUCKS

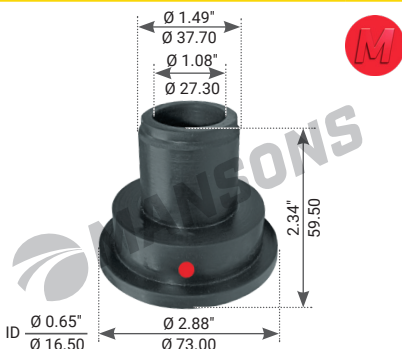


580.230

MOTOR MOUNT

OEM #

APPLICATION
INTERNATIONAL
NAVISTAR TRUCKS

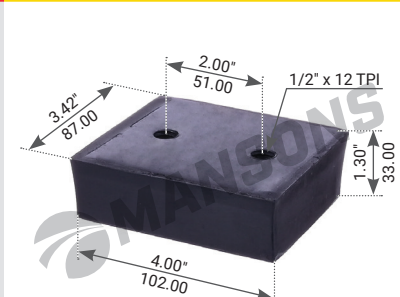

580.075


MOTOR MOUNT

OEM

286235C2
333225C91
7807231C1

APPLICATION

INTERNATIONAL
NAVISTAR 9.0L
ENGINE 1400 TO
1900, 2100 TO 2600,
5000, 5870, 8300,
9600, 9700 SERIES
TRUCKS

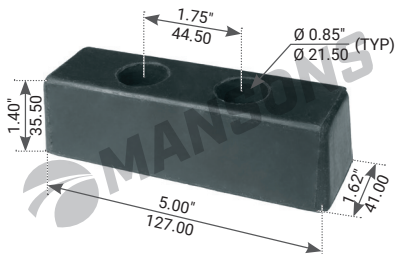

580.078


MOTOR MOUNT

OEM

14003001
286236C2

APPLICATION

INTERNATIONAL
NAVISTAR 9.0L
ENGINES, 1400 TO
1900, 2100 TO 2600,
5000, 5870, 8300,
9600, 9700 SERIES
TRUCKS

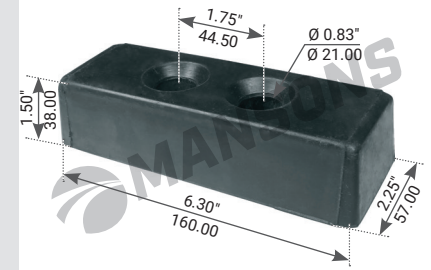

Total Height 1.70"/43.00

580.233


RADIATOR MOUNT

OEM

471478C1
471478C2

APPLICATION

INTERNATIONAL
NAVISTAR 4900
SERIES TRUCKS

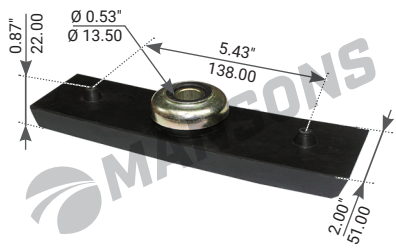

580.050


RADIATOR MOUNT

OEM

200106R1
42002030
448243R1
785666C1
8000316R91

APPLICATION

INTERNATIONAL
NAVISTAR 9800
SERIES TRUCKS

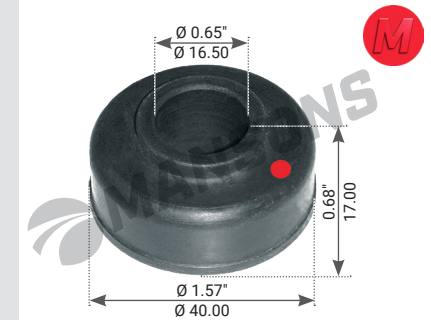

540.037


RADIATOR MOUNT

OEM

598699C1

APPLICATION

INTERNATIONAL
NAVISTAR TRUCKS

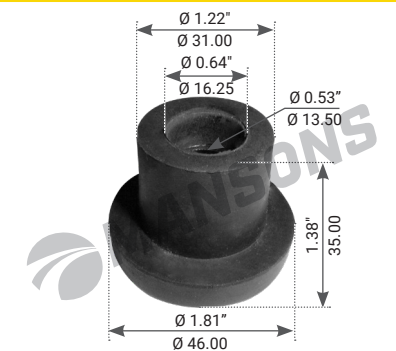

540.038


RADIATOR MOUNT

OEM

462300C2

APPLICATION

INTERNATIONAL
NAVISTAR TRUCKS

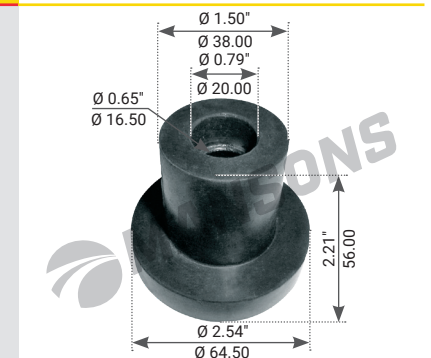

360.605


ISOLATOR

OEM

476869C1
LOR/CB1124-5

APPLICATION

INTERNATIONAL
NAVISTAR 5000, 5870
SERIES TRUCKS
LORD

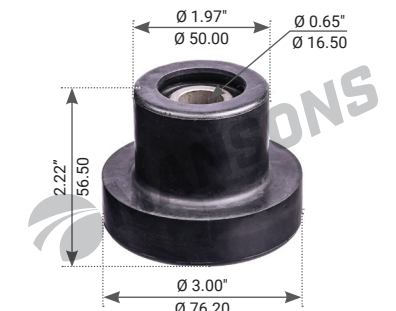

984.003

ISOLATOR BUSHING KIT

OEM #
FULK3399

APPLICATION
INTERNATIONAL
NAVISTAR TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
MPU984.004	—	1	1
120.099.1	—	2	2
984.005	—	3	1

580.254

INTERCOOLER MOUNTING KIT

OEM #
1693647C91

APPLICATION
INTERNATIONAL
NAVISTAR 9800,
9800i SERIES TRUCKS



580.316

INTERCOOLER MOUNTING KIT

OEM #
1693647C91

APPLICATION
INTERNATIONAL
NAVISTAR 9800,
9800i SERIES TRUCKS



580.048

HOOD LATCH

OEM #
1689930C91
16899930C91
1699929C91
499523C3, 500270C1
500271C1

APPLICATION
INTERNATIONAL
NAVISTAR / IHC 12"
OLD STYLE VERSION,
8600, 8500, 8000,
4900, 4800, 4700,
7100, 1652, 1552, S
SERIES TRUCKS




ASSEMBLY

580.215

HOOD LATCH

OEM #
3544924C1
3558776C1
3558776C2

APPLICATION
INTERNATIONAL
NAVISTAR 4100, 4200,
4300, 400, 7300, 7400,
7500, 7600, 8500,
PROSTAR LINEHAUL
CONVENTIONAL
SERIES TRUCKS

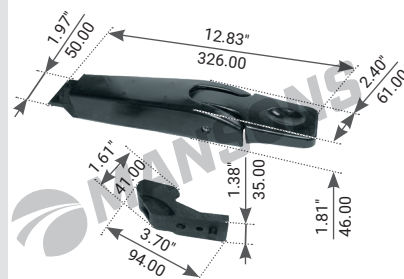


580.216

LATCH, HOOD

OEM #
3544925C2

APPLICATION
INTERNATIONAL
NAVISTAR 4100/
4200/ 4300/ 4400/
7300/ 7400/
7500/ 7600/ 8500
PROSTAR LINEHAUL
CONVENTIONALS
SERIES TRUCKS

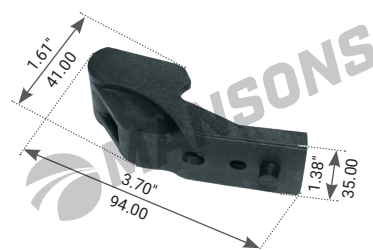


580.237

HOOD LATCH

OEM #
3558774C1
3558776C1
3558776C2

APPLICATION
INTERNATIONAL
NAVISTAR 8600
SERIES TRUCKS

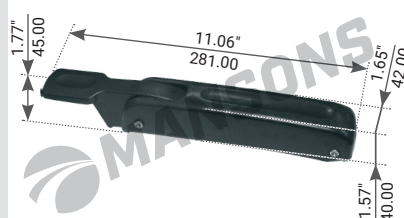


540.142

CABIN MOUNT REPAIR KIT

OEM #
K066-435-3S
L13-1007S

APPLICATION
KENWORTH T600,
T800, W900 SERIES
TRUCKS

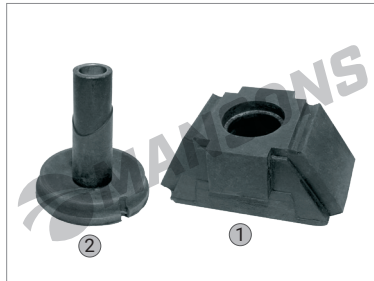

Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
540.114	2650911 L13-1007	1	1
540.115	K066-435-3	2	1

540.114

CABIN MOUNT

OEM #
2650911
L13-1007

APPLICATION
KENWORTH T800
SERIES TRUCKS

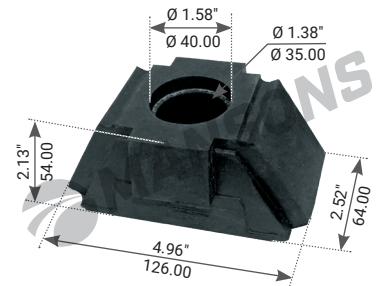


540.115

CABIN MOUNT

OEM #
K066-435-3

APPLICATION
KENWORTH T600,
T800, W900 SERIES
TRUCKS

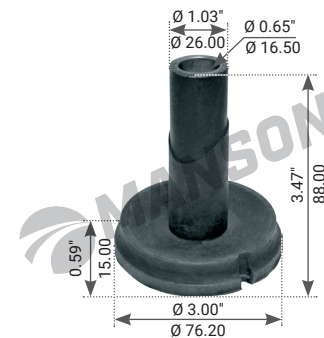


540.065

CABIN MOUNT BUSH

OEM #
66D608
K066-178

APPLICATION
KENWORTH TRUCKS

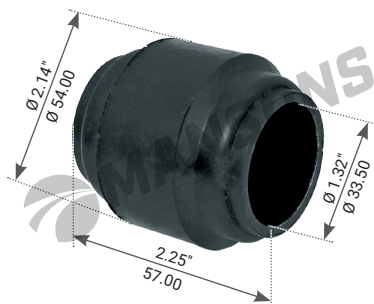


540.030

CABIN MOUNT

OEM #
K066-336
M602-70NR

APPLICATION
KENWORTH T 800
SERIES TRUCKS

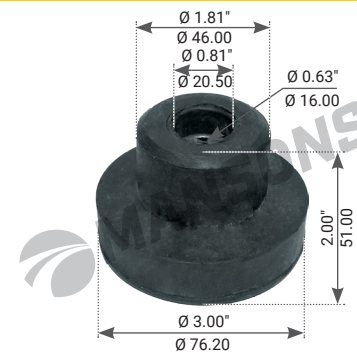


540.031

CABIN MOUNT

OEM #
K006-176
K066-176
M600

APPLICATION
KENWORTH T 800
SERIES TRUCKS

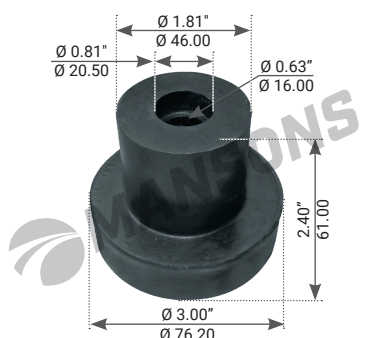


540.036

CABIN MOUNT

OEM #
M700
K066-229

APPLICATION
KENWORTH T600,
W900 SERIES
TRUCKS

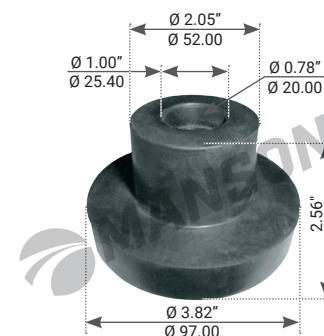

680.044


CABIN MOUNT

OEM

M501-70NR
M501

APPLICATION

KENWORTH C500,
K100, K300, W900,
T300, T400, T450,
T600, T800, T2000
SERIES TRUCKS

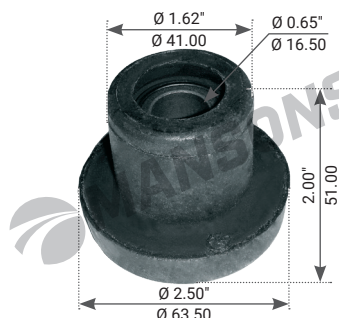

680.073


CABIN MOUNT

OEM

26732-2

APPLICATION

KENWORTH T800,
T2000 SERIES
TRUCKS

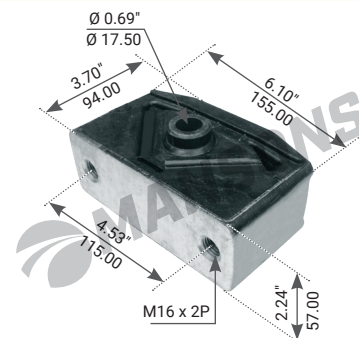

540.011

SHIFTER BOOT

OEM

K042-45

APPLICATION

KENWORTH T600,
T800 SERIES TRUCKS



540.013


SHIFTER BOOT

OEM

K042-702

APPLICATION

KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS

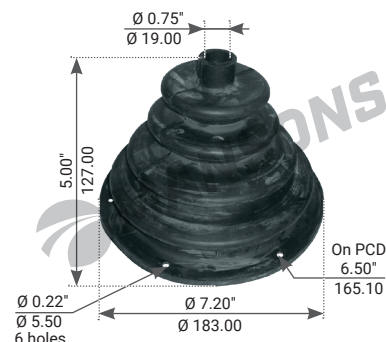

540.273

SHIFTER BOOT SET

OEM

K042-79S
K042-80S

APPLICATION

KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
540.263	K042-80	1	1
540.012	K042-79	2	1

540.012


SHIFTER BOOT

OEM

K042-79

APPLICATION

KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS

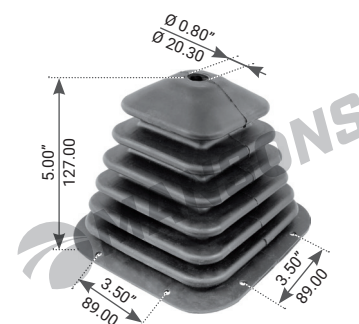

540.263

SHIFTER BOOT

OEM

K042-80

APPLICATION

KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS





360.032

TORQUE ROD, CABIN

OEM #
2993-2019

APPLICATION
KENWORTH T400A,
T600A, 450, 800A,
W900B, T2000
SERIES TRUCKS

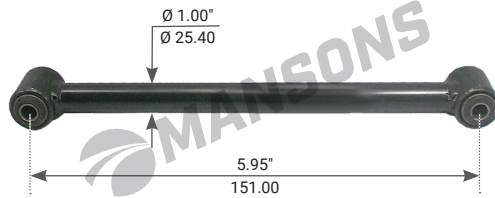


APPLICABLE BUSH	OEM REF	QTY.
580.042 	-	2


360.033

TORQUE ROD, CABIN

OEM #
2993-2009

APPLICATION
KENWORTH CABMATE
SUSPENSIONS

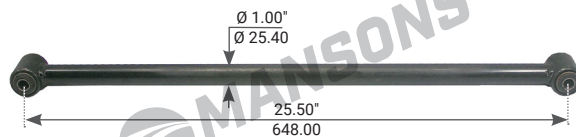


APPLICABLE BUSH	OEM REF	QTY.
580.042 	-	2

540.122

ENGINE MOUNT

OEM #

APPLICATION
KENWORTH TRUCKS

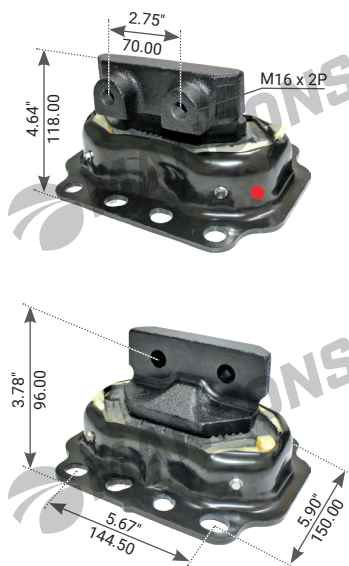


540.123

ENGINE MOUNT

OEM #
U30026


APPLICATION
KENWORTH T660,
T800 SERIES TRUCKS

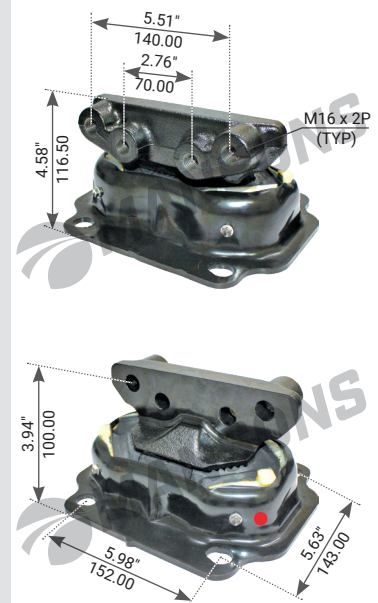

540.209

ENGINE MOUNT


OEM #
12447TBG
APPLICATION
KENWORTH T660,
T800 SERIES TRUCKS

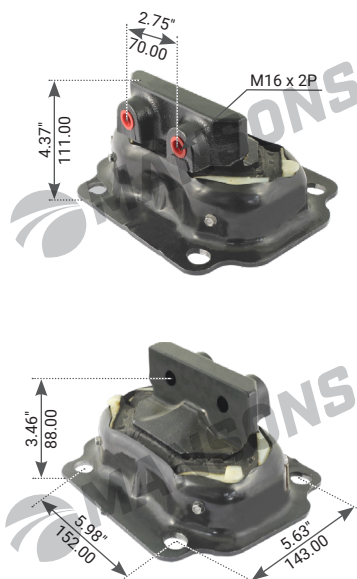

540.106

MOTOR MOUNT KIT

OEM #
K066-404S
K066-405S
APPLICATION
KENWORTH T600
& W900 SERIES
TRUCKS

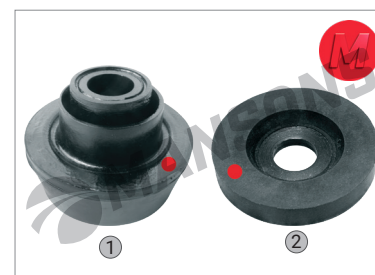

Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
540.029	K066-405 K066-423	1	1
540.105	D29691285 K066-2423 K066-404	2	1

540.131

MOTOR MOUNT KIT

OEM #
K066-377S
K066-391S
K066-421S
APPLICATION
KENWORTH REAR
T600, T800, T2000
SERIES TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
540.049	D1310011 K066-377 K066-391	1	1
540.034	261362 K066-421	2	1

540.029

MOTOR MOUNT


OEM #
K066-405
K066-423
APPLICATION
KENWORTH T600
& W900 SERIES
TRUCKS

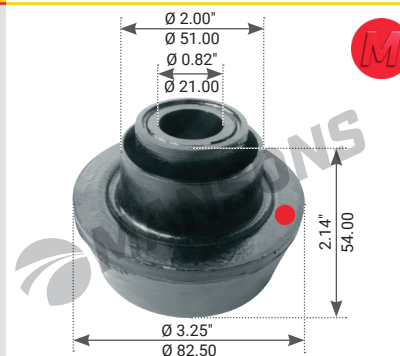

540.105

MOTOR MOUNT

OEM #
D29691285
K066-2423
K066-404
APPLICATION
KENWORTH T600
& W900 SERIES
TRUCKS

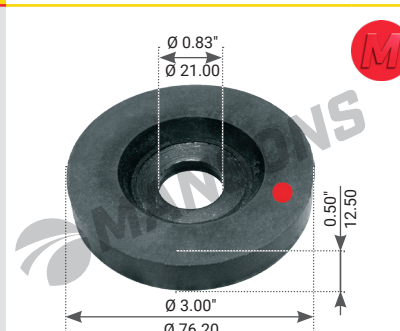


540.049

MOTOR MOUNT

OEM #
D1310011
K066-377
K066-391

APPLICATION
KENWORTH REAR
T600, T800, T2000
SERIES TRUCKS

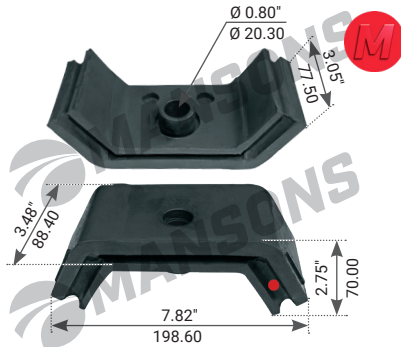


540.034

MOTOR MOUNT

OEM #
261362
K066-421

APPLICATION
KENWORTH REAR
T600, T800, T2000
SERIES TRUCKS

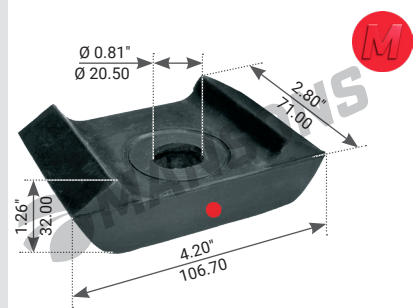


540.053

MOTOR MOUNT

OEM #
K066-282
K066-296
K066-320

APPLICATION
KENWORTH T600,
T800 SERIES TRUCKS

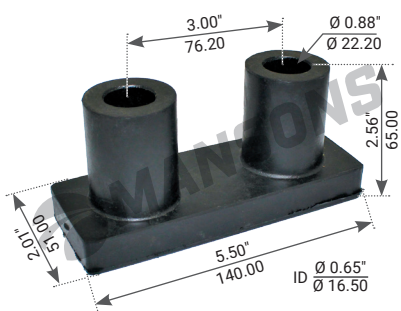


540.064

MOTOR MOUNT

OEM #
K066-247
M506-70NR

APPLICATION
KENWORTH W900A
SERIES TRUCKS

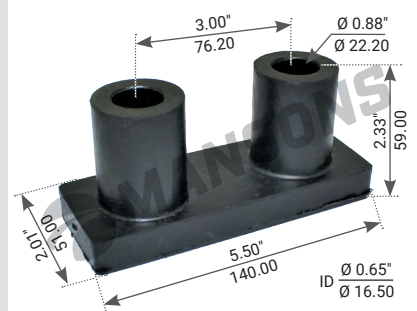


540.066

MOTOR MOUNT

OEM #
K174-555
K174-B456

APPLICATION
KENWORTH W900
SERIES TRUCKS

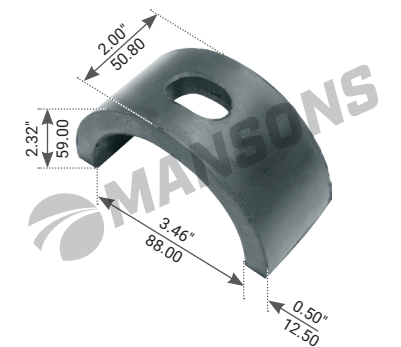


540.116

MOTOR MOUNT

OEM #
K066-381

APPLICATION
KENWORTH ALL
MODEL TRUCKS

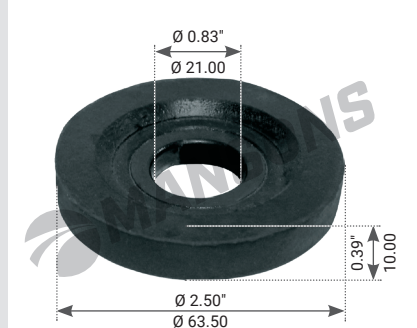


540.067

RADIATOR MOUNT KIT

OEM #
M200-70EP

APPLICATION
KENWORTH C500,
T600, T800, W900
SERIES TRUCKS

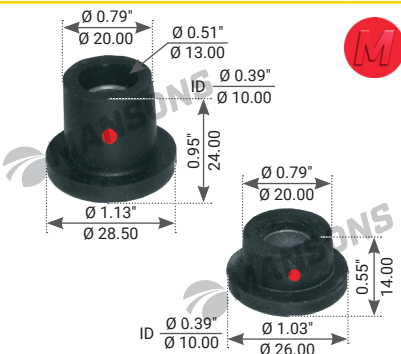


540.037

RADIATOR MOUNT

OEM #
K066-218
M300-70NR


APPLICATION
KENWORTH AIRGLIDE
200, T600, T800,
W900 SERIES
TRUCKS

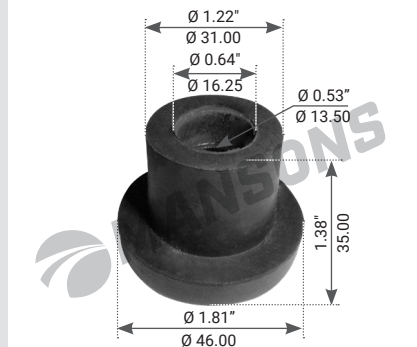

540.038

RADIATOR MOUNT

OEM #
K066-177
M500-70NR
APPLICATION
KENWORTH T800
SERIES TRUCKS

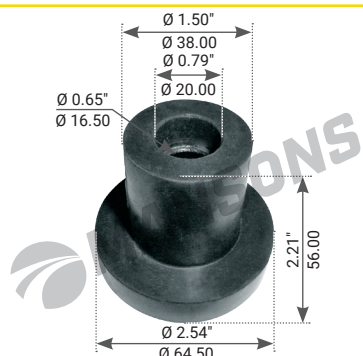

540.211

RADIATOR MOUNT

OEM #
J-8006-10
APPLICATION
LORD CBB & CBC
SERIES TWO-PIECE
MOUNT



540.214

RADIATOR MOUNT


OEM #
K066-338
APPLICATION
KENWORTH TRUCKS



540.063

RADIATOR MOUNT

OEM #
K066-228
K066-251
K066228
K066251
M601-70NR
M60170NR
APPLICATION
KENWORTH W900
SERIES TRUCKS

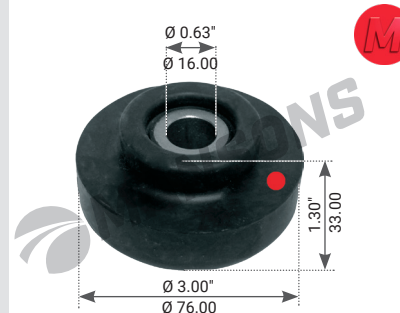

540.320

RADIATOR MOUNT

OEM #
K221-4992S
K264-84S
APPLICATION
KENWORTH T600,
T600B, T800, W900
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
540.213	K264-84	1	2
540.321	K221-4992	2	1

540.213

RADIATOR MOUNT


OEM #
K264-84
APPLICATION
KENWORTH T600,
T600B, T800, W900
SERIES TRUCKS



540.124

HOOD LATCH


OEM #
L56-1037
APPLICATION
KENWORTH T660
SERIES TRUCKS

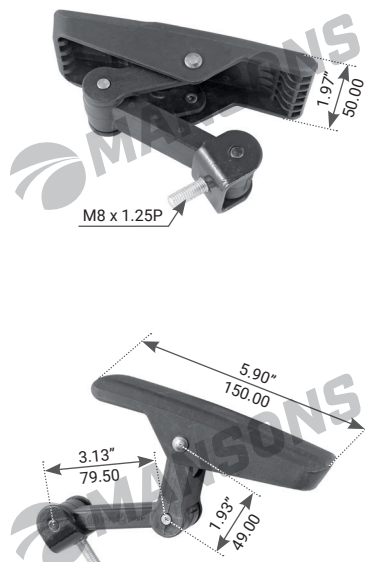

540.128

HOOD LATCH


OEM #
L56-6027
APPLICATION
KENWORTH T660
SERIES TRUCKS

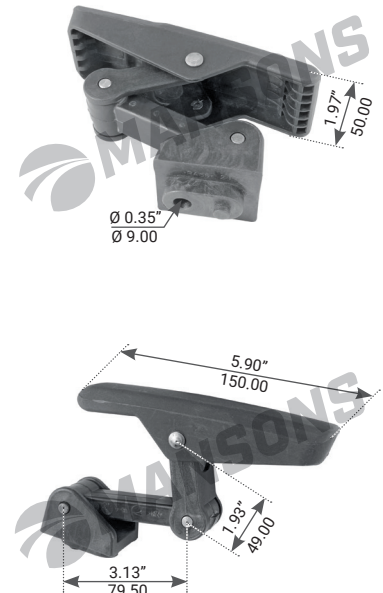

540.138

HOOD LATCH


OEM #
L56-1037S
APPLICATION
KENWORTH T660
SERIES TRUCKS

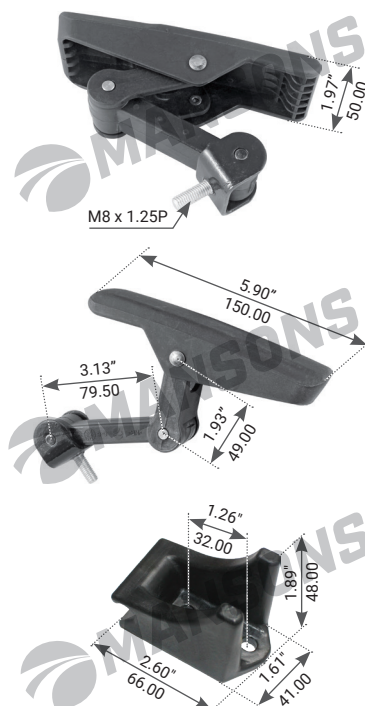

540.139

HOOD LATCH


OEM #
L56-6027S
APPLICATION
KENWORTH T660
SERIES TRUCKS

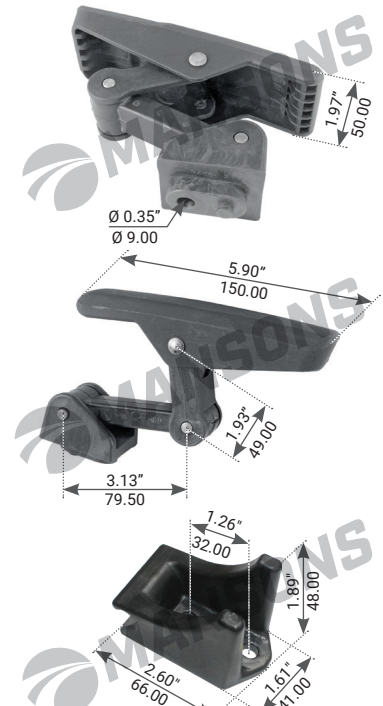

540.126

HOOD LATCH KEEPER


OEM #
L56-1035
APPLICATION
KENWORTH T660
SERIES TRUCKS

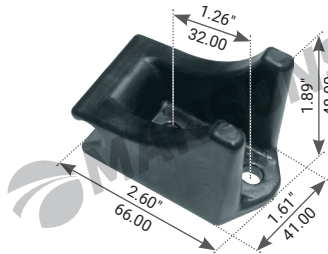

540.127

HOOD LATCH KEEPER


OEM #
L56-6049
APPLICATION
KENWORTH T660
SERIES TRUCKS

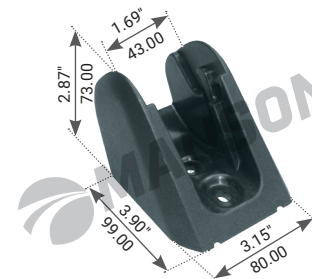

540.035

HOOD LATCH


OEM #
K147-107
K147-C-106
APPLICATION
KENWORTH W900,
T800, T600 SERIES
TRUCKS

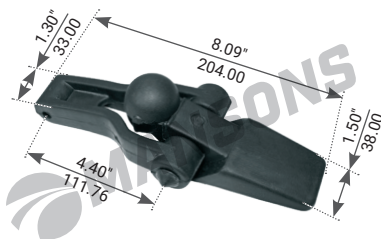

540.076

HOOD LATCH


OEM #
L56-0001
APPLICATION
KENWORTH W900,
T600, T300, T800
SERIES TRUCKS

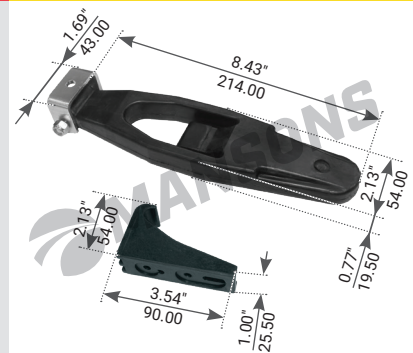

540.081

HOOD LATCH


OEM #
K147-107
K147-107S
K147-C-106
APPLICATION
KENWORTH W900B,
T600A SERIES
TRUCKS

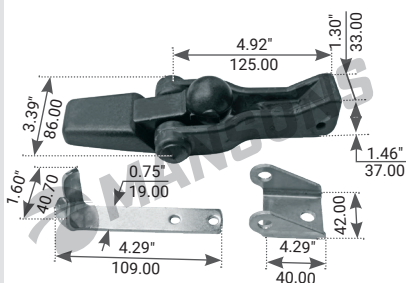

540.099

HOOD LATCH


OEM #
L56-6033
L56-6048
APPLICATION
KENWORTH T880
VOC TRUCKS

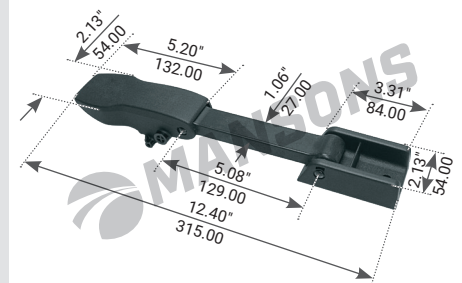

540.014

HOOD PIN


OEM #
701000
K179-528
K179-D-450
APPLICATION
KENWORTH T600,
T800, T2000 & W900
SERIES TRUCKS

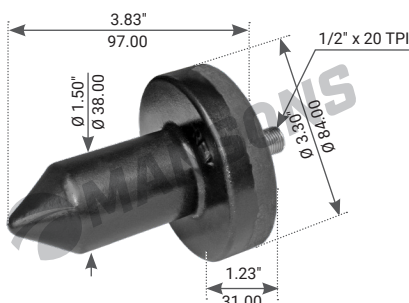

560.055

HOOD PIN

OEM #
K179-D-450
APPLICATION
KENWORTH W900,
T600, T800 SERIES
TRUCKS

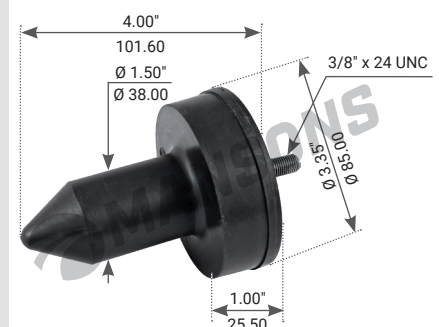

540.173


HOOD MOUNT BLOCK

OEM

R85-1236
R85-1236L
R85-1236R

APPLICATION

KENWORTH T
SERIES BONNETED
TRUCKS WITH 60MM
MOUNTED HOLE
CENTRES

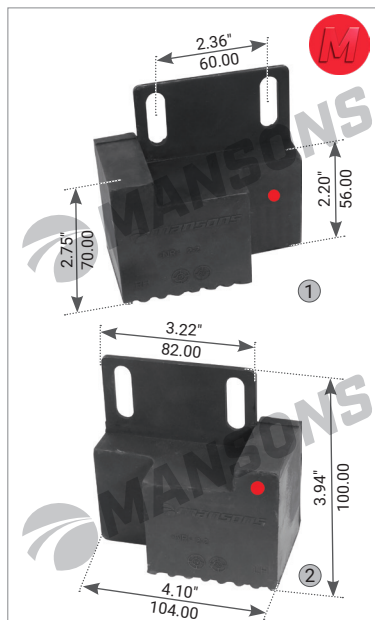

Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
540.171	R85-1236R	1	1
540.172	R85-1236 R85-1236L	2	1

540.171


HOOD MOUNT BLOCK

OEM

R85-1236R

APPLICATION

KENWORTH 'T'
SERIES BONNETED
TRUCKS WITH 60MM
MOUNTED HOLE
CENTERS'

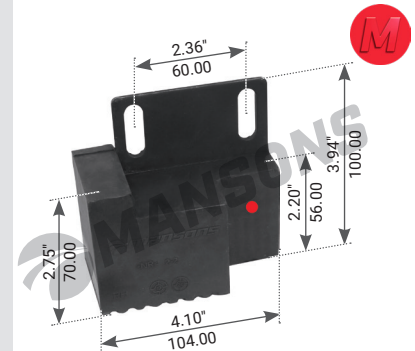

540.172


HOOD MOUNT BLOCK

OEM

R85-1236L

APPLICATION

KENWORTH T
SERIES BONNETED
TRUCKS WITH 60MM
MOUNTED HOLE
CENTERS

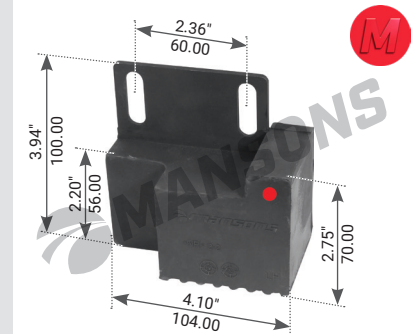

540.317


HOOD BRACKET

OEM

L11-6239

APPLICATION

KENWORTH T680
SERIES TRUCKS

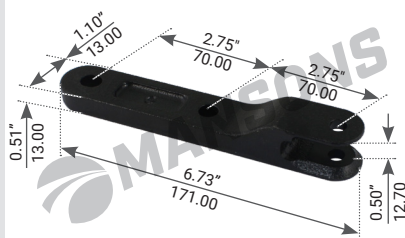

540.921


HOOD HINGE BUSH

OEM

K066-497

APPLICATION

KENWORTH TRUCKS

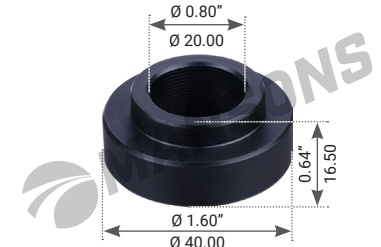

540.922

HOOD HINGE BUSH

OEM

K066-506

APPLICATION

KENWORTH TRUCKS



560.097.1


CABIN MOUNT BUSH

OEM

30QS4525

APPLICATION

MACK CH, CL SERIES
TRUCKS

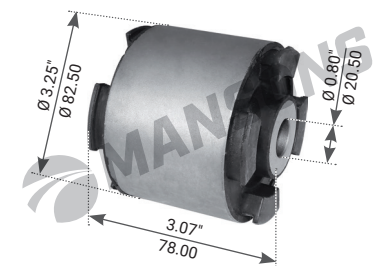


Applicable Mount 560.097

560.097

CABIN MOUNT

OEM #
30QS3479
30QS3479A
30QS3479M
30QS3479AM
30QS3373M
APPLICATION
MACK CH, CL SERIES
TRUCKS

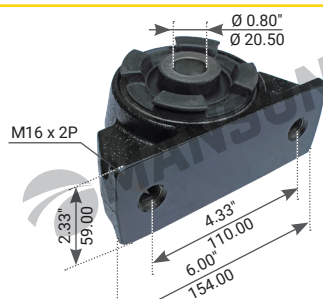


Applicable Bush 560.097.1

560.234

CABIN MOUNT BUSH

OEM #
30QS4525
APPLICATION
MACK CH, CL SERIES
TRUCKS

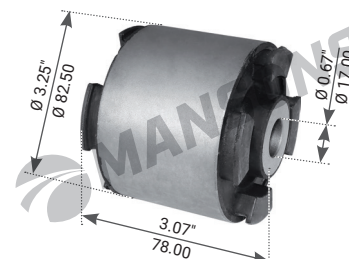


Applicable Mount 560.233

560.233

CABIN MOUNT

OEM #
20975430
30QS4525AM
30QS4525M
APPLICATION
MACK CH, CL SERIES
TRUCKS

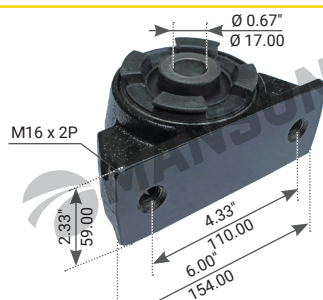


Applicable Bush 560.234

560.057

CABIN MOUNT


OEM #
20QL250
APPLICATION
MACK TRUCKS,
UPPER MOUNT

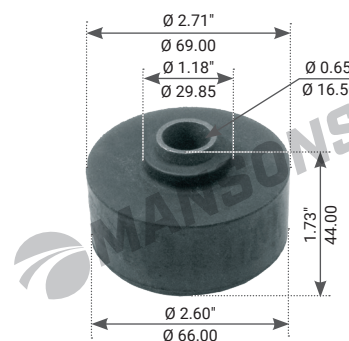

560.366

CABIN MOUNT

OEM #
20QL1144
APPLICATION
MACK TRUCKS,
LOWER MOUNT

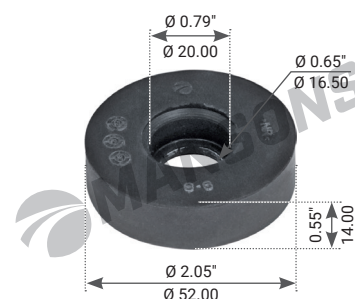

560.368

CABIN MOUNT

OEM #
20QL1144S
20QL250S
APPLICATION
MACK TRUCKS,
LOWER MOUNT
MACK TRUCKS,
UPPER CAB



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
560.366	20QL1144	1	1
560.057	20QL250 25158280	2	1

560.203

SHIFTER BOOT SET

OEM #

25123353
8MY421M2

APPLICATION

MACK CU, CH, CHN
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
560.201	25168877 8MY419M1 PAP803405	1	1
560.202	8MY3116AM PAP803406	2	1

560.201


SHIFTER BOOT

OEM #

25168877
8MY419M1
PAP803405

APPLICATION

MACK CU, CH, CHN
SERIES TRUCKS

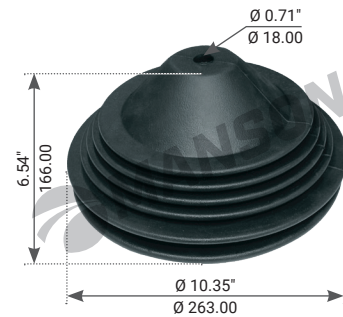

560.202


SHIFTER BOOT

OEM #

8MY3116AM
PAP803406

APPLICATION

MACK CU, CH, CHN
SERIES TRUCKS

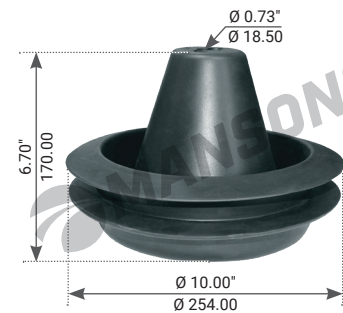

900.079


ENGINE MOUNT

OEM #

20QL414M

APPLICATION

MACK TRUCKS

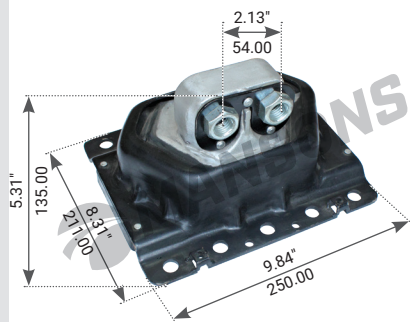

560.111


ENGINE MOUNT

OEM #

20QL47AM
20QL47M
25070943
YM53194211

APPLICATION

MACK CH, CV, CL, CX
SERIES TRUCKS

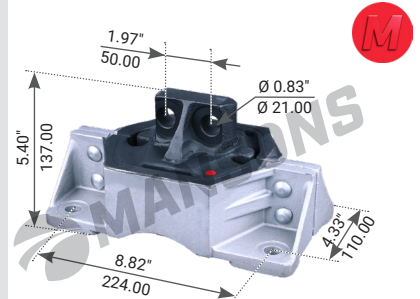



560.104

TRANSMISSION MOUNT KIT

OEM #
204SX216
APPLICATION
MACK REAR R, RD,
CH SERIES ENGINE
TRANSMISSION



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
560.048	20-QL-1118-A 20-QL-117-5 20-QL-193-10	1	8
10.223	--	2	4
WA148	15AX1373 15QD1132	3	8
LN110	--	4	4

560.388

TRANSMISSION MOUNT KIT

OEM #
204SX389
APPLICATION
MACK REAR R, RD,
CH SERIES ENGINE
TRANSMISSION



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
560.048	20-QL-1118-A 20-QL-117-5 20-QL-193-10	1	8
10.223	--	2	4
WA148	15AX1373 15QD1132	3	8
MUBW174	--	4	8
LN110	--	5	4

560.131

MOTOR MOUNT KIT

OEM #
20QL322S
20QL329S
25172757
APPLICATION
MACK CH SERIES
TRUCKS, E6 & E7
ENGINE




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
560.132	20QL322 20QL417	1	1
560.133	20QL329 20QL418	2	1

560.132

MOTOR MOUNT


OEM #
20QL322
20QL417
APPLICATION
MACK CH SERIES
TRUCKS, E6 & E7
ENGINE

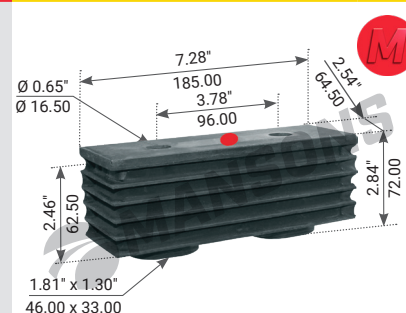

560.133

MOTOR MOUNT

OEM #
20QL329
20QL418
APPLICATION
MACK CH SERIES
TRUCKS, E6 & E7
ENGINE

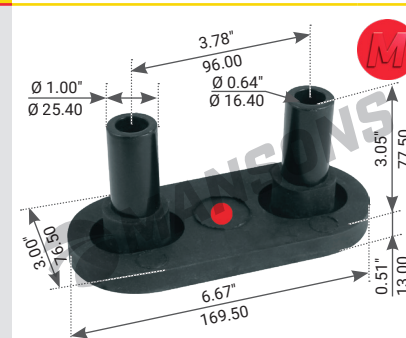

560.039


MOTOR MOUNT KIT

OEM #

20QL302P1
20QL302P2
25155783

APPLICATION

MACK R, RB, RD, RW
MODEL TRUCKS

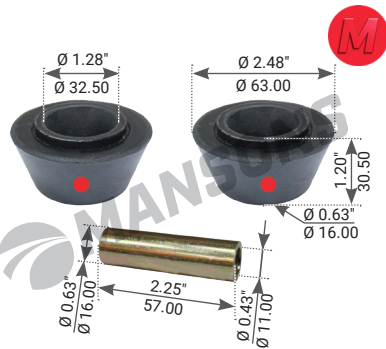

560.048


MOTOR MOUNT

OEM #

20-QL-1118-A
20-QL-117-5
20-QL-193-10
20-QL-245-P1
20-QL-252-P3
20QL1175
25167342

APPLICATION

MACK REAR R, RD,
CH SERIES ENGINE
TRANSMISSION

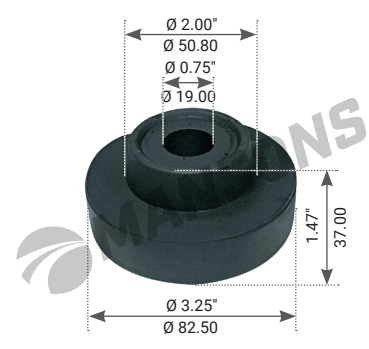

120.103


MOTOR MOUNT

OEM #

20QL312M1

APPLICATION

MACK TRUCKS

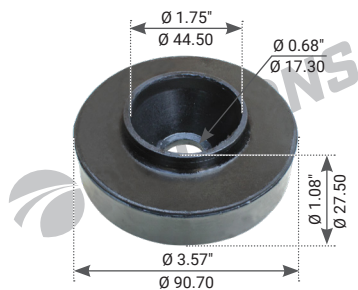

560.029


MOTOR MOUNT

OEM #

20QL324M
20QL346M

APPLICATION

MACK SUPERLINER
SERIES TRUCKS

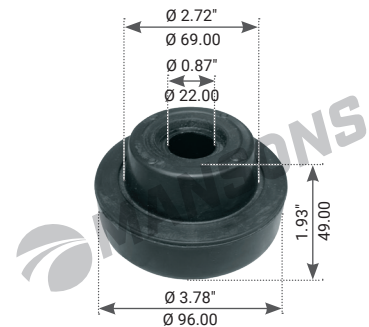

120.098


MOTOR MOUNT

OEM #

20QL312M2

APPLICATION

MACK TRUCKS E6
SERIES ENGINE

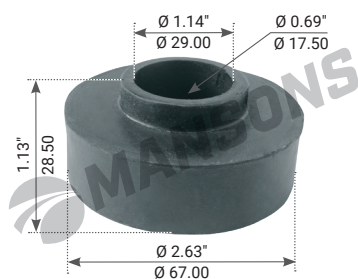

560.019


MOTOR MOUNT

OEM #

20QL2110
20QL258
25160827

APPLICATION

MACK DM, U SERIES
TRUCKS

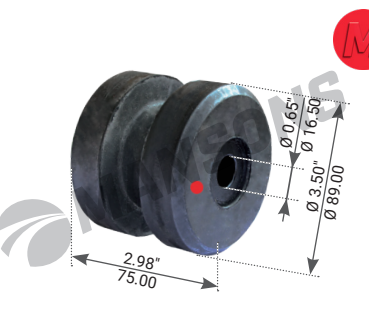

560.056


MOTOR MOUNT

OEM #

20QL338M

APPLICATION

MACK CH, RD & RB
SERIES TRUCKS

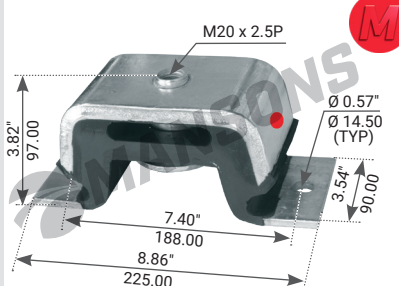

560.054


MOTOR MOUNT

OEM #

20QL1119A
20QL1166

APPLICATION

MACK R SERIES
TRUCKS, E6 ENGINE

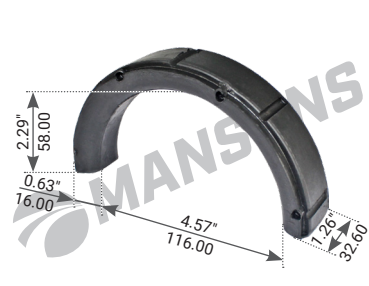

120.533

ISOLATOR ASSEMBLY

OEM #
3088-K3399
APPLICATION
MACK TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
120.054.3	—	1	1
120.533.1	—	2	1
120.099.1	—	3	2
120.533.2	—	4	1

984.003

ISOLATOR BUSHING KIT

OEM #
3088-K399
APPLICATION
MACK TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
MPU984.004	—	1	1
120.099.1	—	2	2
984.005	—	3	1

M62261

ISOLATOR

OEM #
30QS2285M
APPLICATION
MACK CX, CH SERIES
TRUCKS

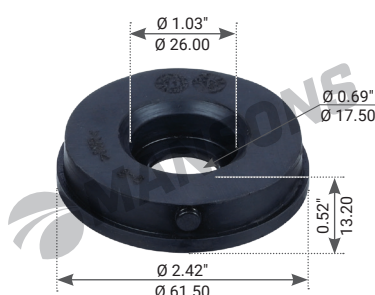

560.465

SEALING RING


OEM #
20828303
APPLICATION
MACK MP7, MP8,
SERIES ENGINE



560.116

INSULATOR


OEM #
20QL1148
20QL29304
APPLICATION
MACK STYLE
AIR DUCT INLET
INSULATOR

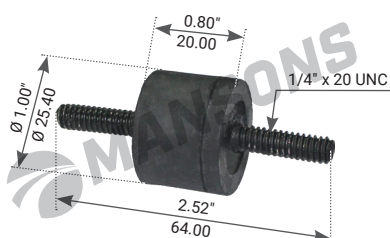

560.237

INSULATOR


OEM #
20QL286
APPLICATION
MACK UNIVERSAL
TRUCKS, E6 ENGINE

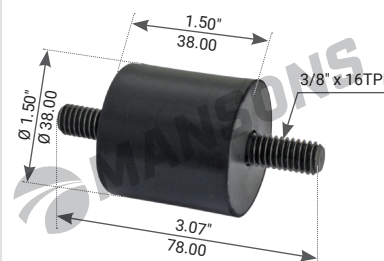

560.336

INSULATOR


OEM #
20-QL-1131
APPLICATION
MACK UNIVERSAL
TRUCKS

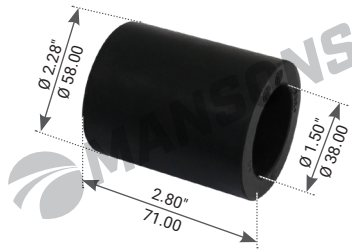

560.337

INSULATOR

OEM #
20QL1168
20QL1168D
APPLICATION
MACK R, RB, RD & RW
SERIES TRUCKS

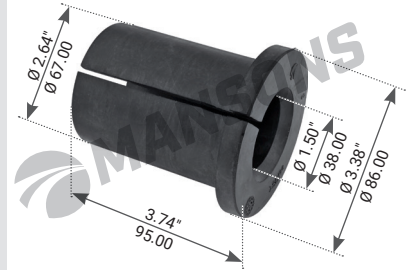

560.431

INSULATOR


OEM #
20QL231P12
MAK20QL231P12
APPLICATION
MACK CH SERIES
TRUCKS



560.457

INSULATOR


OEM #
20QL295M
APPLICATION
MACK UNIVERSAL
TRUCKS, E6 SERIES
ENGINE

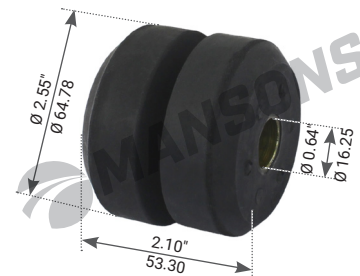

560.186

HOOD LATCH


OEM #
3QM214
FHL4664
APPLICATION
MACK DM, RD SERIES
TRUCKS

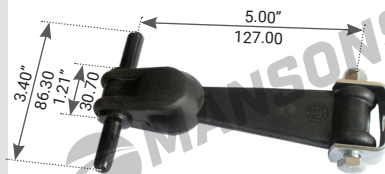

560.191

HOOD LATCH KIT


OEM #
25159428
3QM313M
APPLICATION
MACK CH, CHN, CXN,
CV SERIES TRUCKS

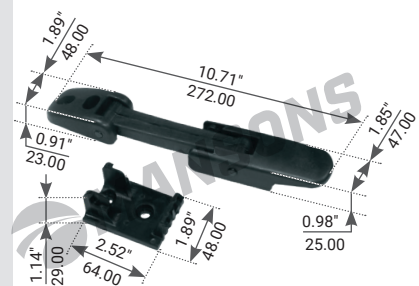

560.192

HOOD LATCH KIT


OEM #
25169065
3QM3132M2
3QM313M2
APPLICATION
MACK CH, CHN, CXN,
CV SERIES TRUCKS

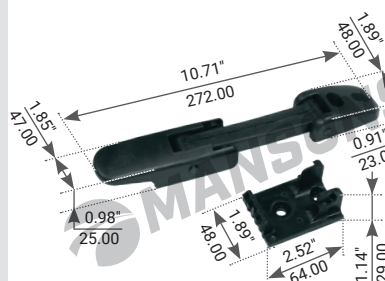

560.373

HOOD LATCH

OEM #
3QM310M
MAK3QM310M
APPLICATION
MACK CH, CL, CX
SERIES TRUCKS

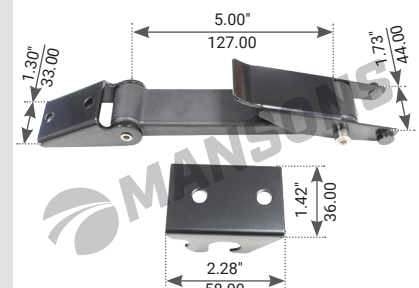


560.210 HOOD HINGE BUSH ASSEMBLY

OEM #
12QD2146M,
25154747
4QM414AM, 4QM47M

APPLICATION
MACK CH, CNX
SERIES TRUCKS

Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
560.098	25154747, 25159954 4QM414AM, 4QM47M	1	1
560.209	12QD2146M, 25154747	2	1

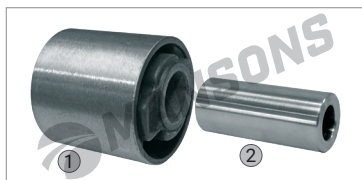

560.098 HOOD HINGE BUSH

OEM #
25154747
25159954
4QM414AM
4QM47M


APPLICATION
MACK CH, CNX
SERIES TRUCKS

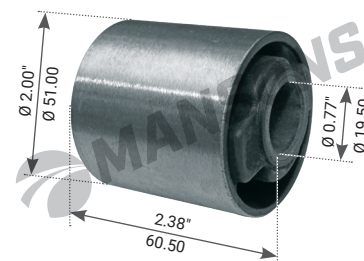

560.209 PIN

OEM #
12QD2146M
25154747



APPLICATION
MACK CH, CNX
SERIES TRUCKS

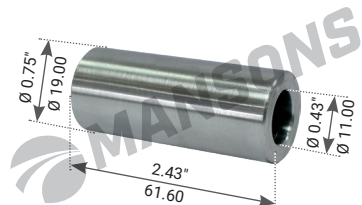

120.856 HOOD HINGE BUSH

OEM #
25165604
4QM281M


APPLICATION
MACK CL, CH SERIES
TRUCKS

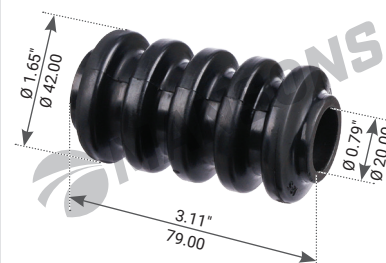

560.055 HOOD PIN

OEM #
25QM31


APPLICATION
MACK UNIVERSAL
TRUCKS

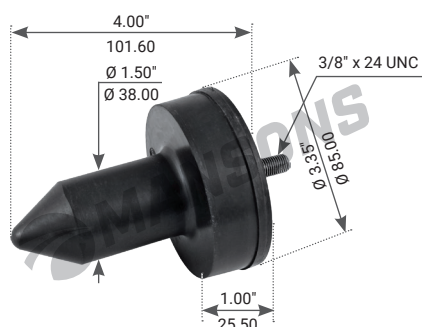

560.119 HOOD BRACKET

OEM #
140QM434M
20802371


APPLICATION
MACK CH, CL, CX, CV
SERIES TRUCKS

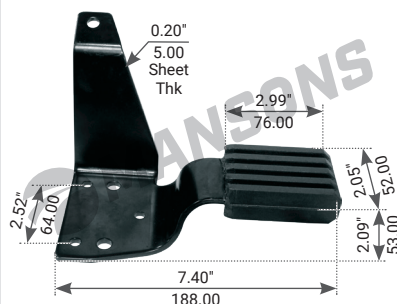

560.121 HOOD BRACKET

OEM #
140QM433M
20802362


APPLICATION
MACK CH, CL, CX, CV
SERIES TRUCKS
RH

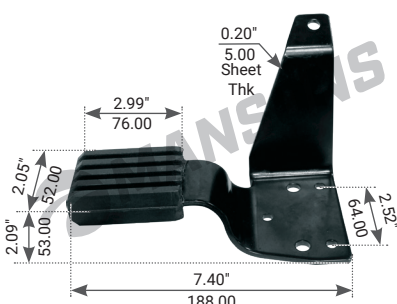

360.042 MOTOR MOUNT

OEM #
R307439


APPLICATION
MERITOR

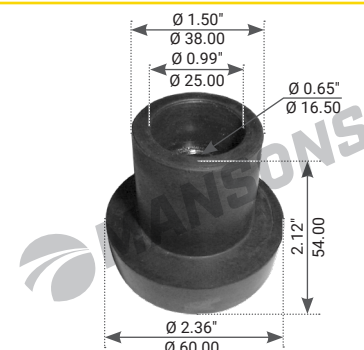

540.063

RADIATOR MOUNT


OEM #
R307472
APPLICATION
MERITOR

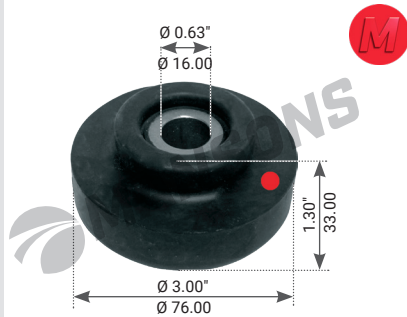

540.213

RADIATOR MOUNT


OEM #
R307640
APPLICATION
MERITOR

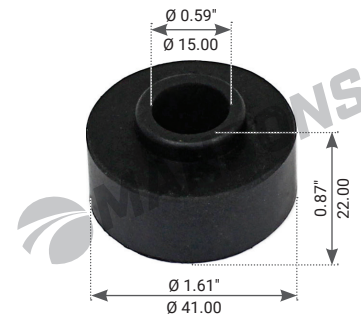

680.044

CABIN MOUNT


OEM #
05-08968
APPLICATION
PETERBILT 359
SERIES TRUCKS

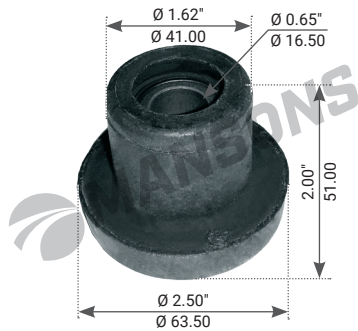

540.036

CABIN MOUNT


OEM #
05-08969
05-10103
APPLICATION
PETERBILT 357, 359,
362, 365, 367, 377,
378, 379, 384, 385,
387 SERIES TRUCKS

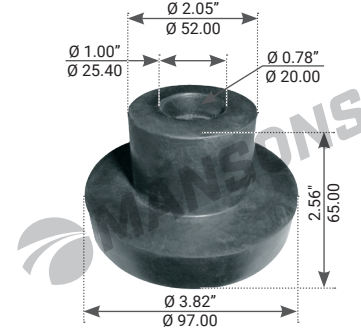

680.072

CABIN MOUNT BUSH


OEM #
20-08257
20-08867
APPLICATION
PETERBILT 357, 365,
378, 379, 385, 389
SERIES TRUCKS

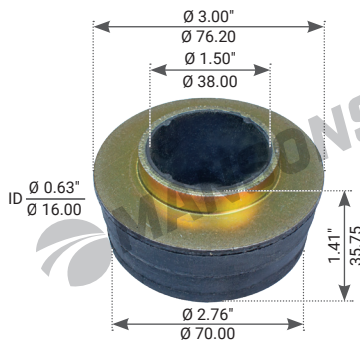

680.073

CABIN MOUNT

OEM #
20-25121
APPLICATION
PETERBILT 387
SERIES TRUCKS

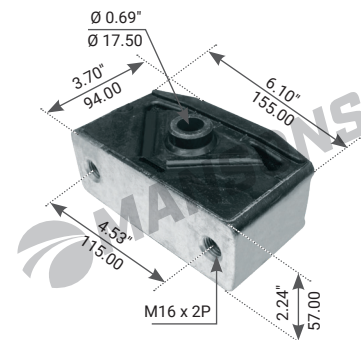

680.090

MOTOR MOUNT KIT

OEM #
CB2203-70S
APPLICATION
PETERBILT 379
SERIES TRUCKS, C15
& C11 ENGINE




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
680.045	CB2203-70	--	4

680.045

MOTOR MOUNT

OEM #
CB2203-70
APPLICATION
PETERBILT 379
SERIES TRUCKS, C15
& C11 ENGINE

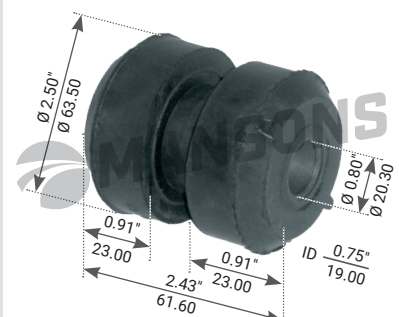


360.596

MOTOR MOUNT

OEM #
CB220372
LOR/CB2203-72
APPLICATION
PETERBILT 357, 377,
378, 379 SERIES
TRUCKS
LORD

NEW

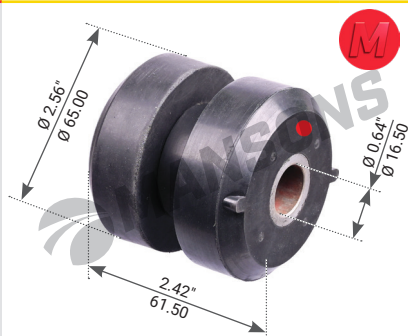

360.610

MOTOR MOUNT


OEM #
CB-1122-2
LOR/CB-1122-2
APPLICATION
PETERBILT TRUCKS
LORD



540.067

RADIATOR MOUNT KIT


OEM #
1301633
APPLICATION
PETERBILT 357, 375
TO 379, 385, 386
SERIES TRUCKS Pre
1995 STANDARD ALL
ENGINES

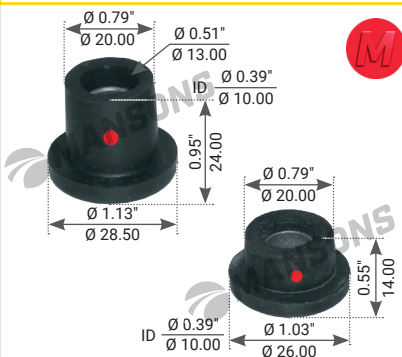

540.063

RADIATOR MOUNT


OEM #
07-03286
APPLICATION
PETERBILT 386
SERIES TRUCKS

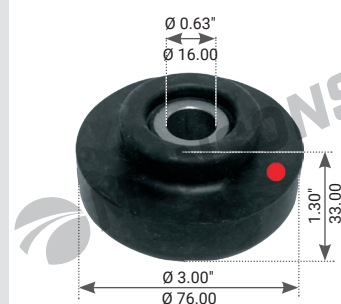

540.122

ENGINE MOUNT

OEM #
12448TBG
APPLICATION
PETERBILT REAR
ENGINE 388, 579
MODELS TRUCKS

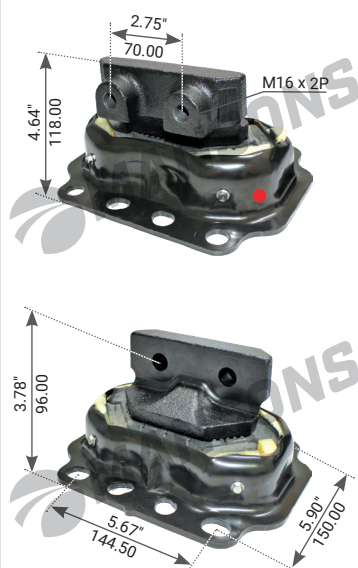


540.123

ENGINE MOUNT

OEM #


APPLICATION
PETERBILT TRUCKS

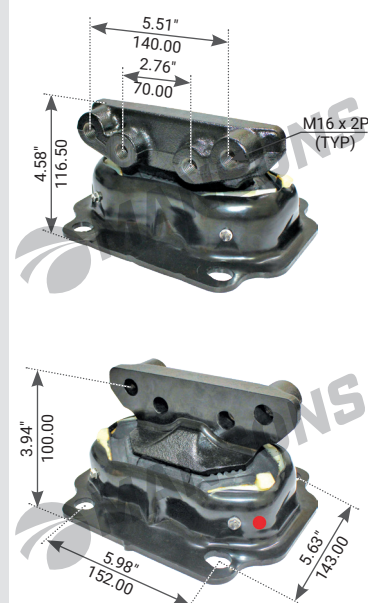

360.505

INSULATOR


OEM #
05-17597
LOR/SSB26-1000-1
APPLICATION
PETERBILT 320
SERIES TRUCKS
LORD

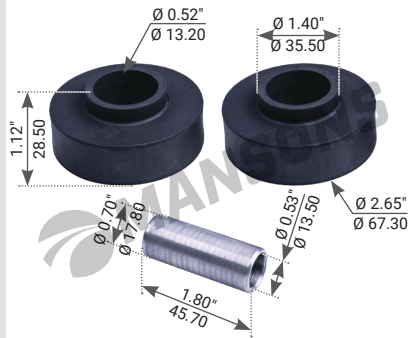

120.101

HOOD LATCH


OEM #
29-00322
APPLICATION
PETERBILT TRUCKS,
UNIVERSAL 7" HOOD
LATCH

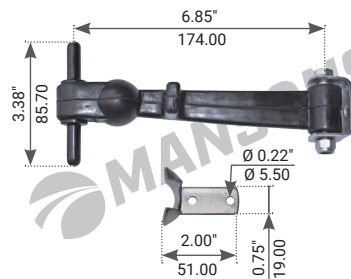

120.102

HOOD LATCH


OEM #
29-00223
36576K
APPLICATION
PETERBILT 320, 348,
359, 377, 378, 379,
567, 579, 587 SERIES
TRUCKS

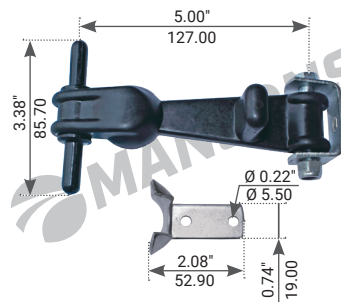

680.027

HOOD LATCH

OEM #
23-02700
29-00314
APPLICATION
PETERBILT 320, 348,
359, 377, 378, 379,
567, 579, 587 SERIES
TRUCKS

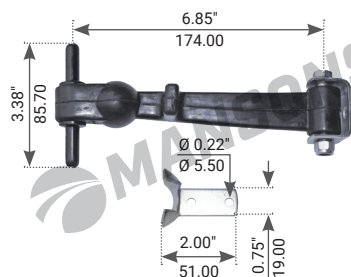

984.003

ISOLATOR BUSHING KIT

OEM #
K-3399
APPLICATION
PETERBILT TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
MPU984.004	—	1	1
120.099.1	—	2	2
984.005	—	3	1

120.104

HOOD LATCH


OEM #
29-00215
APPLICATION
PETERBILT 320, 348,
359, 377, 378, 379,
567, 579, 587 SERIES
TRUCKS

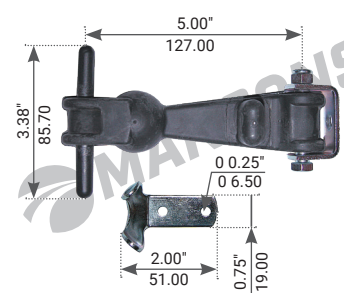

540.076

HOOD LATCH


OEM #
23-13857
APPLICATION
PETERBILT 357, 359,
367, 377, 379, 388,
389 SERIES TRUCKS

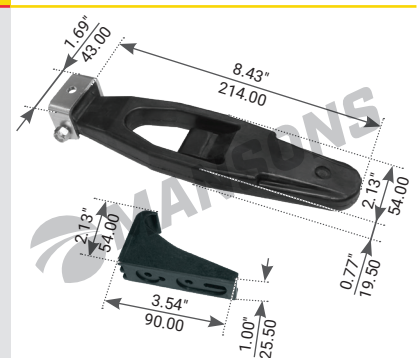

360.182

HOOD LATCH

OEM #
13-04339
APPLICATION
PETERBILT 379
SERIES TRUCKS

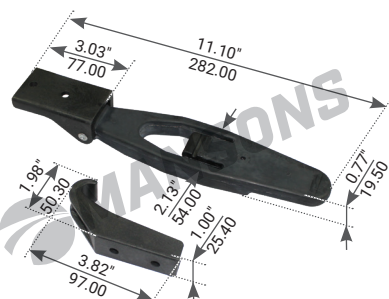

680.120

HOOD HINGE BUSHING KIT

OEM #
13-04154S
L13-6006S
APPLICATION
PETERBILT LOWER
HOOD 379 SERIES
TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
680.121	L13-6006	1	1
680.122	13-04154	2	2

680.121

HOOD HINGE BUSH


OEM #
L13-6006
APPLICATION
PETERBILT LOWER
HOOD 379 SERIES
TRUCKS

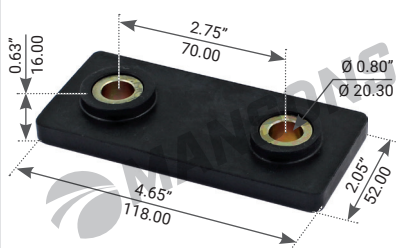

680.122

HOOD HINGE BUSH

OEM #
13-04154
APPLICATION
PETERBILT LOWER
HOOD 379 SERIES
TRUCKS

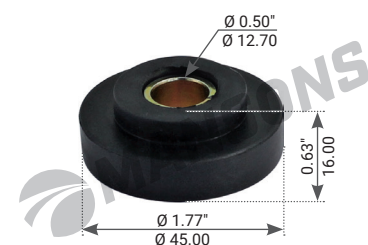

540.317

HOOD BRACKET


OEM #
L11-6239
APPLICATION
PETERBILT 579
SERIES TRUCKS



680.130

HOOD SPRING STUD


OEM #
13-03761
APPLICATION
PETERBILT 378, 379
SERIES TRUCKS

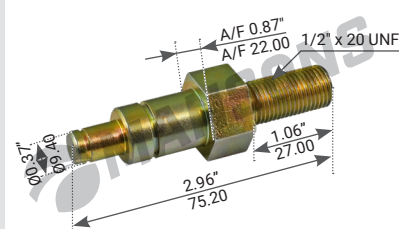

800.087

CABIN MOUNT BUSH


OEM #
20581381
21271207
APPLICATION
VOLVO FL6, FE
SERIES TRUCKS, VM
USA SERIES TRUCKS

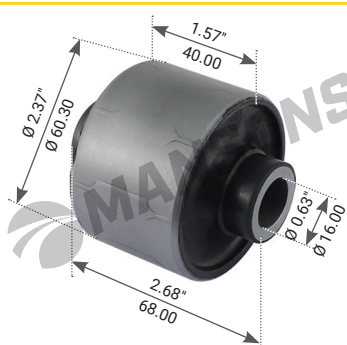

800.088

CABIN MOUNT BUSH


OEM #
20850895
APPLICATION
VOLVO FE, VM USA
SERIES TRUCKS

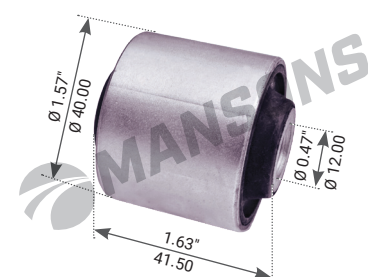

900.364

CABIN MOUNT BUSH


OEM #
8074666
APPLICATION
VOLVO VHD, VN, VNL
USA SERIES TRUCKS

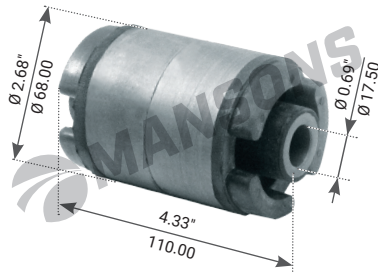

560.057

CABIN MOUNT


OEM #
25158280
APPLICATION
VOLVO TRUCKS,
UPPER MOUNT

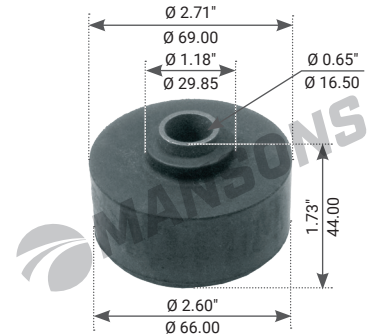

360.603

CABIN MOUNT


OEM #
3093386
671333220
LOR/CB-2201-2
APPLICATION
VOLVO USA TRUCKS
LORD

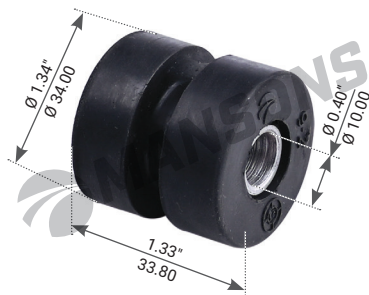

900.698

ENGINE MOUNT


OEM #
21416525
APPLICATION
VOLVO FH, FM 2012
ONWARDS, FMX
SERIES, VM USA
SERIES TRUCKS

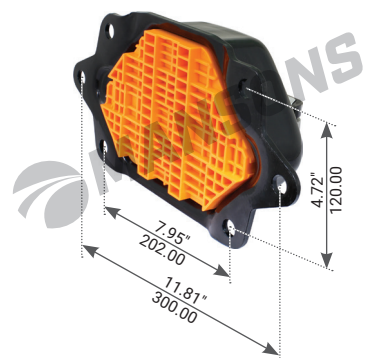

900.699

ENGINE MOUNT


OEM #
1626870
20503552
20503553
APPLICATION
VOLVO FM12, FM9,
NH, FMX SERIES
TRUCKS

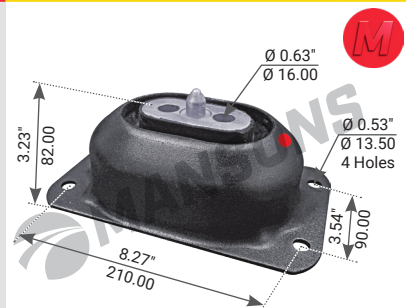

580.244

MOTOR MOUNT

OEM #
8075202S
8077380S
APPLICATION
VOLVO VN, VNL USA
SERIES TRUCKS

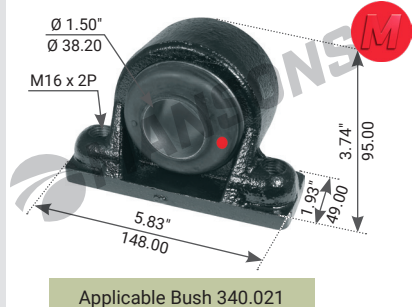

Applicable Bush 340.021

580.435

MOTOR MOUNT BRACKET ASSEMBLY

OEM #
8075202S
8077380S
APPLICATION
VOLVO VN, VNL USA
SERIES TRUCKS



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
580.244	8075202S 8077380S	1	1
580.271	—	2	1

340.344

MOTOR MOUNT SET

OEM #
120040007
3081657
APPLICATION
VOLVO VN, VNL USA
SERIES TRUCKS




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
340.021	120040007 3081657	1	2

340.021

MOTOR MOUNT

OEM #
120040007
3081657
APPLICATION
VOLVO VN, VNL USA
SERIES TRUCKS

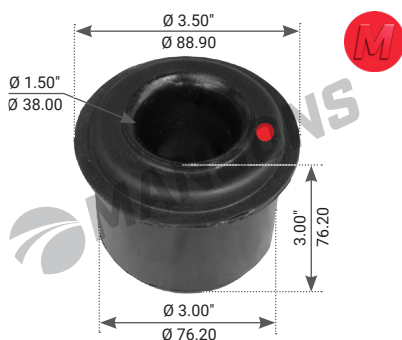

900.350

MOTOR MOUNT

OEM #
8075202
8077380
APPLICATION
VOLVO VN, VNL-USA
SERIES TRUCKS




580.271

BRACKET

OEM #


APPLICATION
VOLVO VN, VNL USA
SERIES TRUCKS

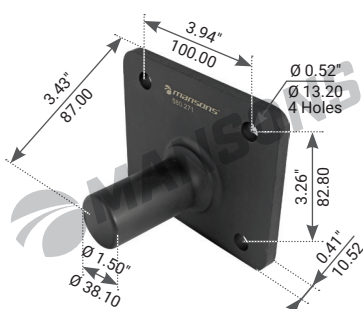

900.542

MOTOR MOUNT

OEM #
3101159
APPLICATION
VOLVO 340/
360 SERIES
SUSPENSIONS

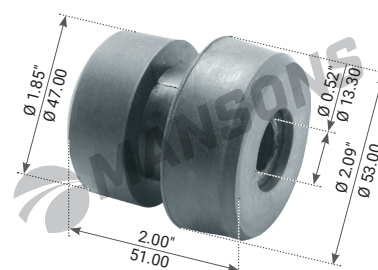

900.403


MOTOR MOUNT

OEM #

12005-0001
12005-3207

APPLICATION

VOLVO VNL, VNM, NL
SERIES HEAVY DUTY
TRUCKS

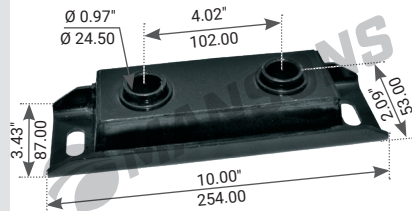

900.404


MOTOR MOUNT

OEM #

120050002
120053208
3081659

APPLICATION

VOLVO / GMC
TRUCKS

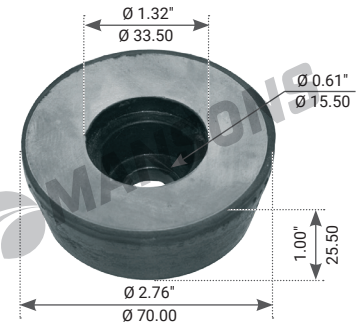

120.533

ISOLATOR ASSEMBLY

OEM #

85105720

APPLICATION

VOLVO



Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
120.054.3	--	1	1
120.533.1	--	2	1
120.099.1	--	3	2
120.533.2	--	4	1

900.885

HOOD MOUNT BRACKET

OEM #

20704338
20769319

APPLICATION

VOLVO VNL 300/ 430/
610/ 630/ 660/ 670/
780 SERIES TRUCKS



560.465

SEALING RING

OEM #

20 82 83 03

APPLICATION

VOLVO D13 SERIES
ENGINES



900.423


HOOD LATCH

OEM #

1118205
8174018

APPLICATION

VOLVO AC, WA, WC,
WG, WI USA SERIES
TRUCKS

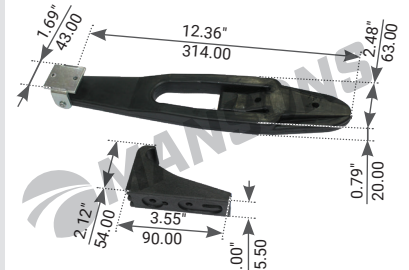

900.910

ISOLATOR


OEM #
20976700
APPLICATION
VOLVO VN SERIES
TRUCKS



360.187

SHIFTER BOOT

OEM #
27076457
28405-3401
APPLICATION
WESTERN STAR

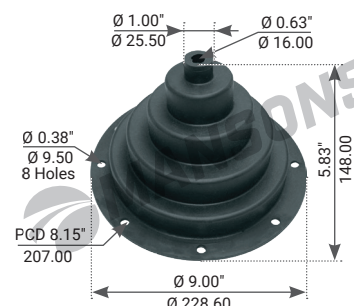

860.027

MOTOR MOUNT ASSEMBLY

OEM #
04-9009997S
12004-3401S
12004-3402S
APPLICATION
WESTERN STAR




Kit consists of :

MANSONS #	OEM #	TYPE	QTY.
860.029	12004-3401	1	2
860.028	12004-3402	2	1

360.387

MOTOR MOUNT

OEM #
509860
APPLICATION
WESTERN STAR

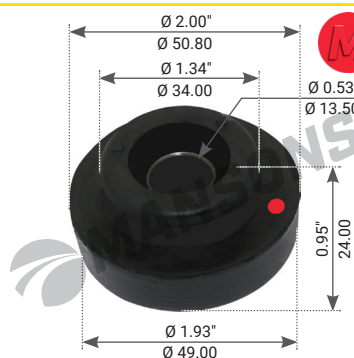

860.029

MOTOR MOUNT


OEM #
12004-3401
APPLICATION
WESTERN STAR



860.028

MOTOR MOUNT

OEM #
12004-3402
APPLICATION
WESTERN STAR

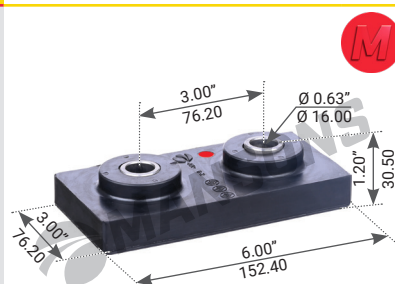

360.327

MOTOR MOUNT

OEM #
049009991
120053403
737814A
APPLICATION
WESTERN STAR



360.607

MOTOR MOUNT

OEM #
236213401
APPLICATION
WESTERN STAR



360.610

MOTOR MOUNT


OEM #
120053402
APPLICATION
WESTERN STAR



540.063

RADIATOR MOUNT


OEM #
049009996
APPLICATION
WESTERN STAR

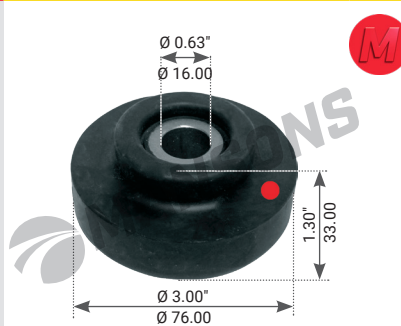

360.603

ISOLATOR


OEM #
670093442
APPLICATION
WESTERN STAR

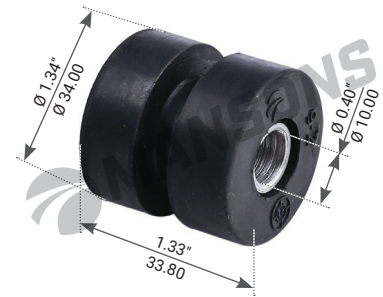

360.147

HOOD LATCH

OEM #
671013419
APPLICATION
WESTERN STAR

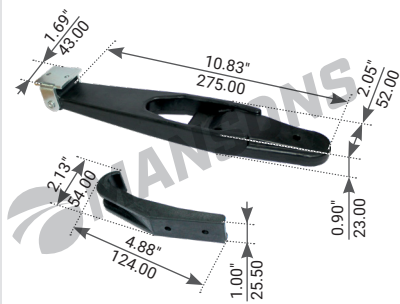

SHIFTER BOOTS

CABIN, ENGINE & HOOD COMPONENTS




DRIVING CHANGE

120.059

SHIFTER BOOT


OEM #
5C4Z-7E109-AA
5C4Z-7F110-AA
1677150C2,
1680583C1
APPLICATION
FORD TRUCKS
INTERNATIONAL
NAVISTAR TRUCKS

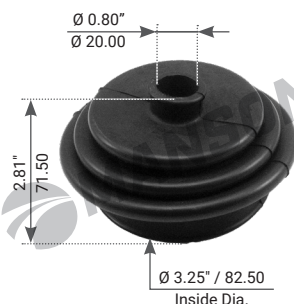

120.060

SHIFTER BOOT


OEM #
E3HZ-7277-B
E3HZ-7277-BB
APPLICATION
FORD F600, F700,
F800 SERIES HEAVY
DUTY TRUCKS

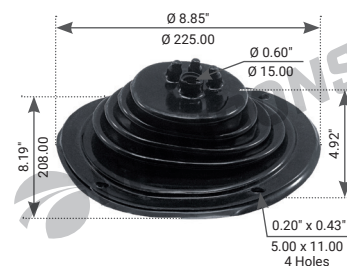

360.019

SHIFTER BOOT


OEM #
07-11176-000
07-11584-000
APPLICATION
FREIGHTLINER EARLY
FLA, FLB SERIES
TRUCKS

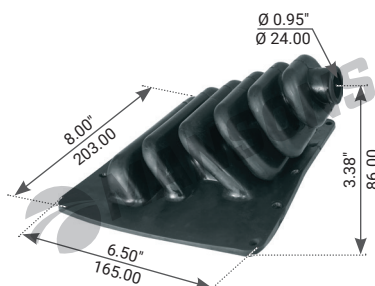

360.187

SHIFTER BOOT

OEM #
144847386750
28405-3401
68D885, HUN68D885
27076457
28405-3401
APPLICATION
FREIGHTLINER FLC,
FLD SERIES TRUCK,S
CAB TRANSMISSION
LEVER
WESTERN STAR

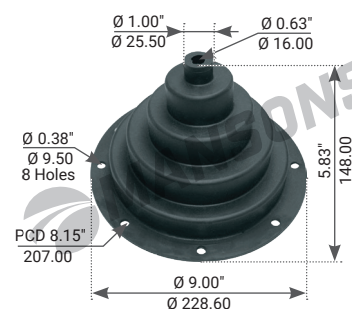

360.290

SHIFTER BOOT

OEM #
18-30769-000
18-30769-001
18-30769-002
APPLICATION
FREIGHTLINER
CORONADO,
COLUMBIA, CENTURY
SERIES TRUCKS



360.529

SHIFTER BOOT


OEM #
18-58501-000
18-58501-001
APPLICATION
FREIGHTLINER
CASCADIA SERIES
TRUCKS



580.021

SHIFTER BOOT


OEM #
2014834
26011202
286655C1
286655C2
286655C3
286655C4
APPLICATION
INTERNATIONAL
NAVISTAR 'S', 4000
SERIES TRUCKS

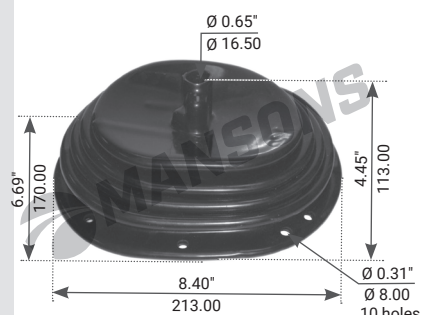

580.022

SHIFTER BOOT

OEM #
2014835
291068C1
291068C2
APPLICATION
INTERNATIONAL
NAVISTAR 'S', 4900
SERIES TRUCKS

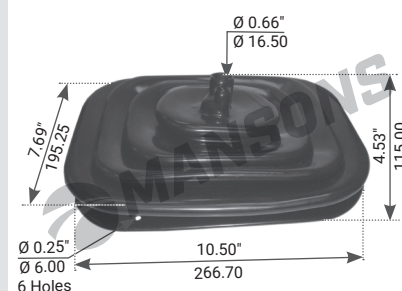


580.023

SHIFTER BOOT

OEM #
778671C1

APPLICATION
INTERNATIONAL/ IHC
TRUCKS

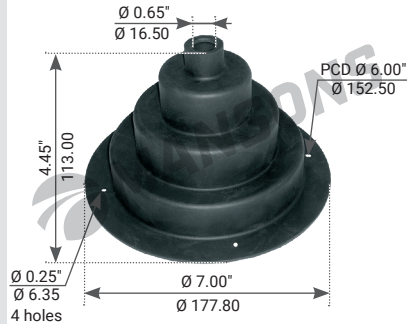


580.267

SHIFTER BOOT

OEM #
1677878C1
507014C3

APPLICATION
INTERNATIONAL
NAVISTAR 5870,
9600, 9700, 9800,
9900 COE SERIES
TRUCKS

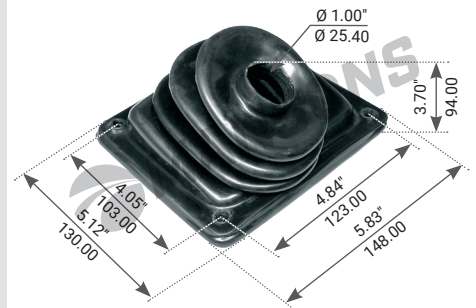


540.011

SHIFTER BOOT

OEM #
K042-45

APPLICATION
KENWORTH T600,
T800 SERIES TRUCKS

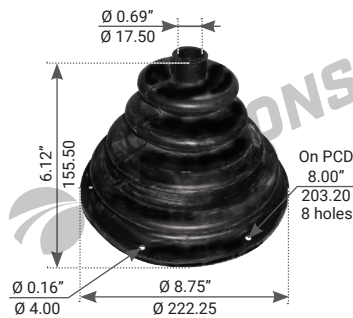

540.013

SHIFTER BOOT

OEM #
K042-702

APPLICATION
KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS



540.273

SHIFTER BOOT SET

OEM #
K042-79S
K042-80S

APPLICATION
KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
540.263	K042-80	1	1
540.012	K042-79	2	1

540.012

SHIFTER BOOT

OEM #
K042-79

APPLICATION
KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS

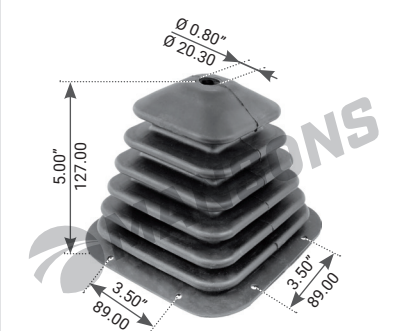


540.263

SHIFTER BOOT

OEM #
K042-80

APPLICATION
KENWORTH T2000,
T800, T600, T660,
T170, T270, T370,
T300, W900 SERIES
TRUCKS

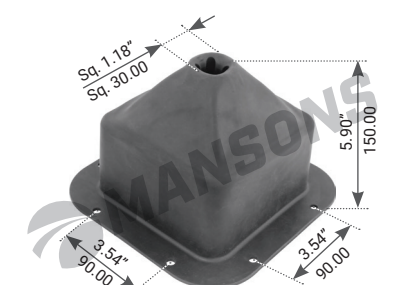

SHIFTER BOOTS

CABIN, ENGINE & HOOD COMPONENTS



DRIVING CHANGE

560.203

SHIFTER BOOT SET

OEM #
25123353
8MY421M2

APPLICATION
MACK CU, CH, CHN
SERIES TRUCKS



Kit consists of :


MANSONS #	OEM #	TYPE	QTY.
560.201	25168877 8MY419M1 PAP803405	1	1
560.202	8MY3116AM PAP803406	2	1

560.201

SHIFTER BOOT

OEM #
25168877
8MY419M1
PAP803405

APPLICATION
MACK CU, CH, CHN
SERIES TRUCKS

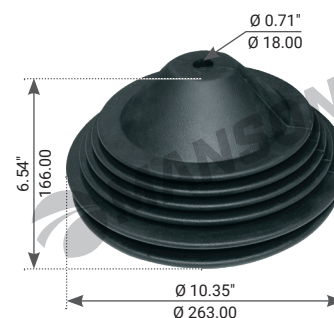


560.202

SHIFTER BOOT

OEM #
8MY3116AM
PAP803406

APPLICATION
MACK CU, CH, CHN
SERIES TRUCKS

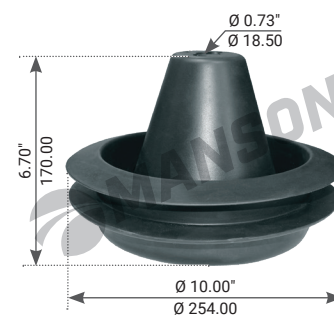





PS 7

NORTH AMERICAN CABIN, ENGINE & HOOD COMPONENTS

