


### replacement for FREIGHTLINER TRUCKS

Page 1 of 3

**MANSONS# 360.000PR**

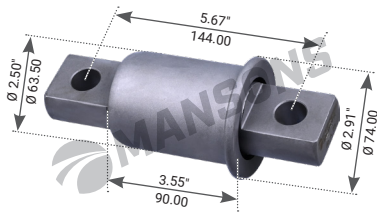

#### SPRING EYE BUSH


OEM#	APPLICATION
16-16412-000 16-18035-000 681-325-02-50	FREIGHTLINER FAS II AIRLINER SERIES TRUCKS

#### Features & Benefits:

- Heavy duty polymer for improved service life under arduous/ extreme conditions
- Enhanced & heavier no-walk design & construction prevents typical wear from yaw & pitch
- Suitable for super heavy duty applications & overload conditions

### replacement for KENWORTH TRUCKS

**MANSONS# 540.330**

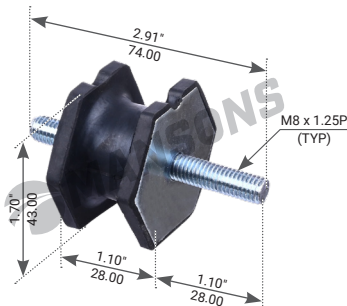


#### STUD MOUNT

OEM#	APPLICATION
K233-495	KENWORTH TRUCKS

### replacement for MACK TRUCKS

**MANSONS# 560.463**

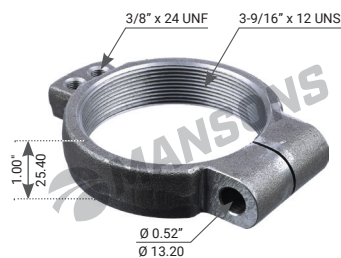

#### TRUNNION NUT


OEM#	APPLICATION
25QJ215 MAK25QJ215	MACK SUSPENSIONS



### replacement for MERITOR AXLES

Page 2 of 3

#### MANSONS# 780.153

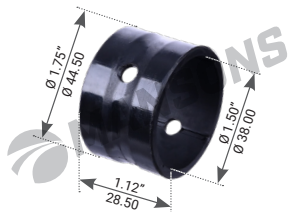

#### CAMSHAFT BUSH

OEM#	APPLICATION
1225-J-634 R627048	MERITOR TN, TP, TQ & TR, 5000 SERIES AXLES
28-1253	SPICER

### replacement for TOYOTA TRUCKS

#### MANSONS# 371.035




#### CLUTCH LEVER

OEM#	APPLICATION
312470-H011 312470-H012	TOYOTA AYGO SERIES LIGHT COMMERCIAL VEHICLES

### replacement for GENERAL PURPOSE APPLICATIONS


#### MANSONS# 120.1701

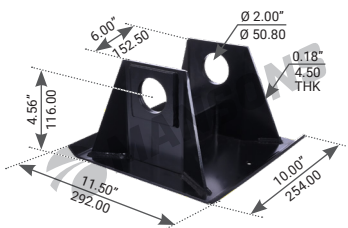

#### LANDING GEAR SAND SHOE

OEM#	APPLICATION
1001-1292	BUFFERS
905.700.100A	TOCA

#### MANSONS# 120.1702

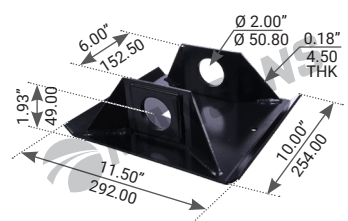

#### LANDING GEAR SAND SHOE


OEM#	APPLICATION
1001-1295	BUFFERS
905.700.101A	TOCA



### replacement for GENERAL PURPOSE APPLICATIONS

Page 3 of 3

**MANSONS# 120.1707**

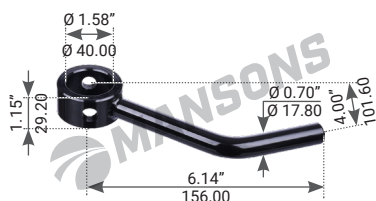

#### HANDLE ASSEMBLY

OEM#	APPLICATION
1107-1257-4	BUFFERS
905.265.100	TOCA

