


### replacement for BPW AXLES, FRUEHAUF TRAILERS

Page 1 of 5


#### MANSONS# 300.2531

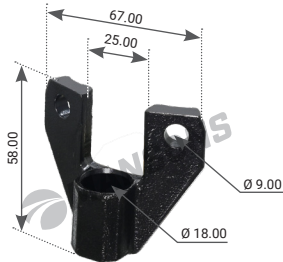

#### SENSOR HOLDER

OEM#	APPLICATION
03.189.14.86.0	BPW SK 9008 / 9010 ECO PLUS 3 SERIES AXLES


#### MANSONS# 300.2555

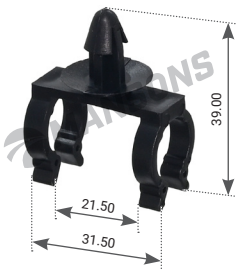

#### SENSOR HOLDER

OEM#	APPLICATION
02.1421.23.00	BPW ECO PLUS 3 SERIES AXLES

#### MANSONS# 300.2556

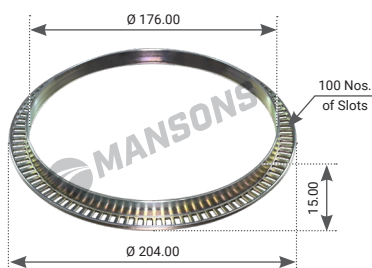

#### IMPULSE WHEEL

OEM#	APPLICATION
03.310.09.35.0	BPW H ECO PLUS SERIES 10-12 TONS AXLES

#### MANSONS# 120.1739



#### U BOLT SADDLE KIT


OEM#	APPLICATION
CF350902	FRUEHAUF TRAILERS
SP269 SP270	GIGANT TRAILERS



### replacement for MERCEDES TRUCKS

Page 2 of 5


#### MANSONS# 700.1553

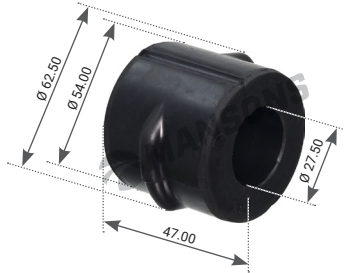

#### STABILIZER BUSH

OEM#	APPLICATION
970 323 1485 979 320 0344 A970 323 1485 A979 320 0344	MERCEDES ATEGO SERIES TRUCKS


#### MANSONS# 700.1554

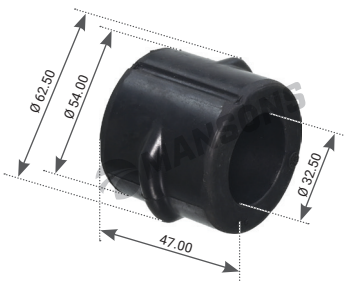

#### STABILIZER BUSH

OEM#	APPLICATION
375 323 0185 970 323 0485 970 323 1585 A375 323 0185 A970 323 0485 A970 323 1585	MERCEDES ATEGO SERIES TRUCKS

#### MANSONS# 700.1557

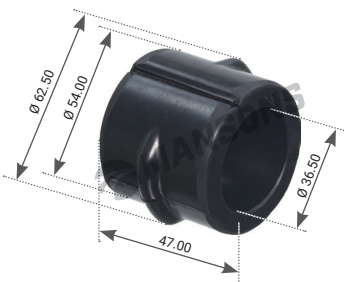

#### STABILIZER BUSH


OEM#	APPLICATION
970 323 1785 A970 323 1785	MERCEDES ATEGO SERIES TRUCKS



### replacement for MONTENEGRO TRAILER AXLES

Page 3 of 5

#### MANSONS# 120.1806

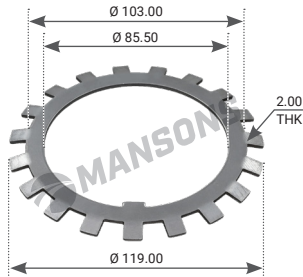

#### AXLE END LOCK WASHER

OEM#	APPLICATION
1303843 8431957020971	MONTENEGRO TRAILER AXLES

### replacement for SCANIA BUS & TRUCKS

#### MANSONS# 100.2382



#### CLAMP, EXHAUST

OEM#	APPLICATION
2189587	SCANIA 4 SERIES BUS

#### MANSONS# 100.2383



#### CLAMP, EXHAUST


OEM#	APPLICATION
2394986	SCANIA R SERIES TRUCKS



### replacement for SCANIA BUS & TRUCKS

Page 4 of 5


#### MANSONS# 100.2384

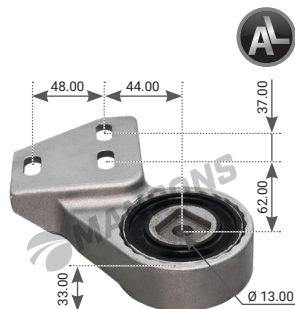

#### RADIATOR BRACKET

OEM#	APPLICATION
1791182	SCANIA P, G, R SERIES TRUCKS

#### MANSONS# 100.2385

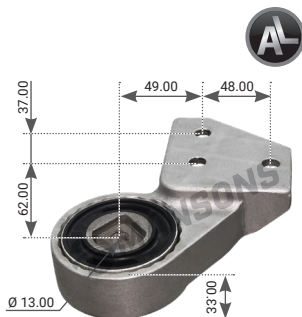

#### RADIATOR BRACKET

OEM#	APPLICATION
1791181	SCANIA P, G, R SERIES TRUCKS

#### MANSONS# 100.2392



#### MOUNT, MUDWING HOLDER

OEM#	APPLICATION
1781031	SCANIA P, G, R, T, L, S, 4 SERIES TRUCKS



### replacement for VOLVO, RENAULT BUS & TRUCKS

Page 5 of 5

**MANSONS# 900.2092**



#### STABILIZER BUSH

OEM#	APPLICATION
20428166	VOLVO FH12, FH16, FH4, FM10, FM12, FM7, FM9, FMX SERIES TRUCKS, B11, B12 SERIES BUS
7420428166	RENAULT C, K, T SERIES TRUCKS



e-mail: [sales@mansons.in](mailto:sales@mansons.in) • website: [www.mansons.in](http://www.mansons.in)

Reference in this catalogue to OEM / third party names, part numbers / OEM numbers is only for information on OEM / third party parts corresponding to Mansons components & does not imply any connection / affiliations between Mansons & the OEM.

